


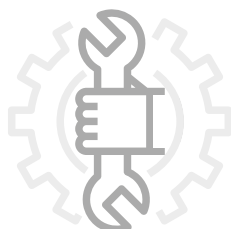
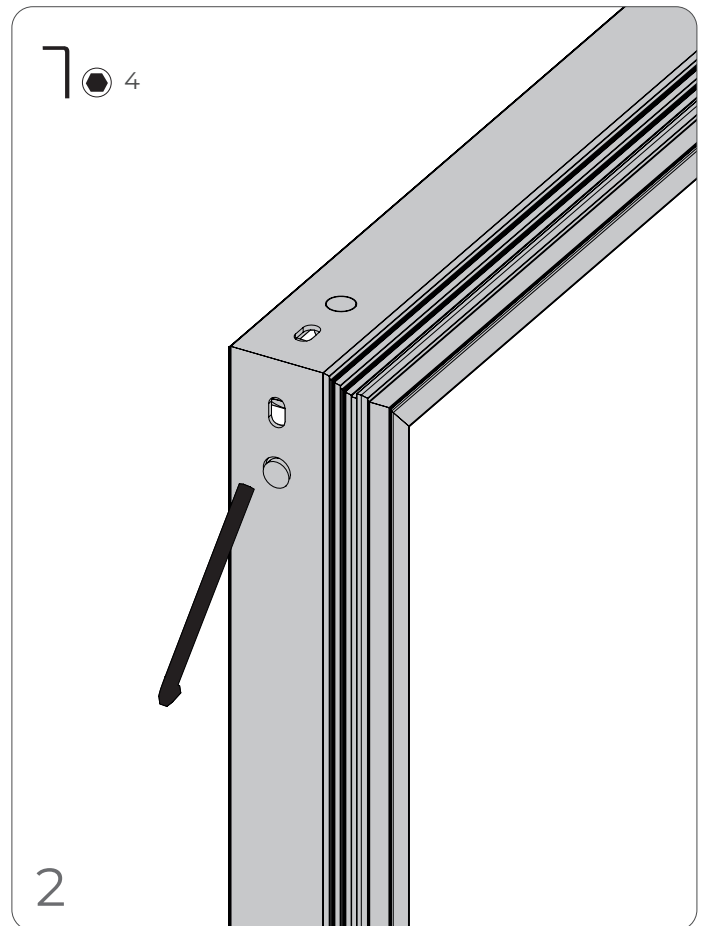


INNER X1 FRAME



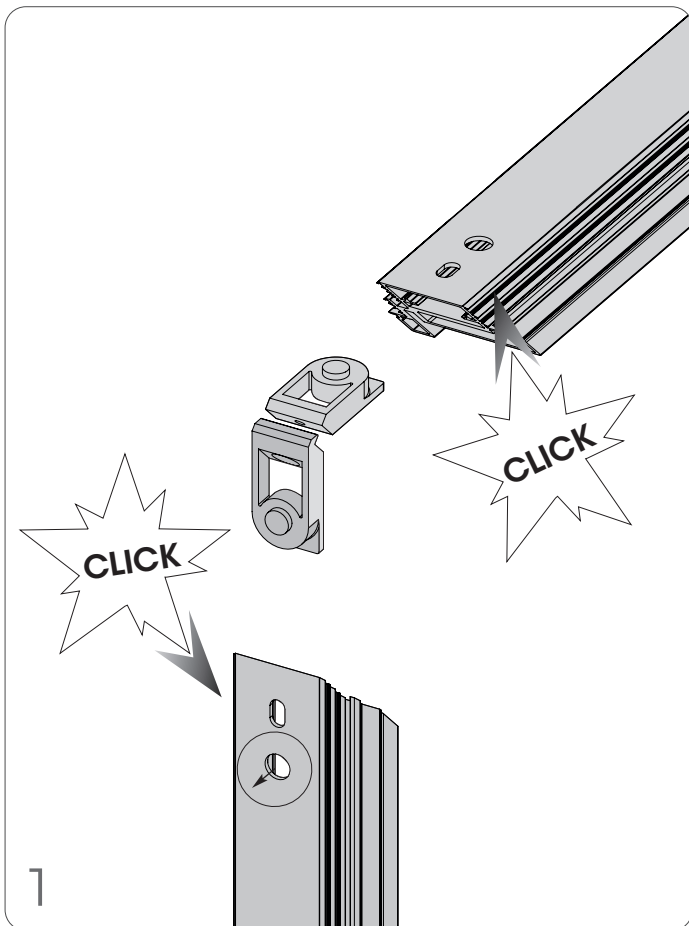


BARAUSSE

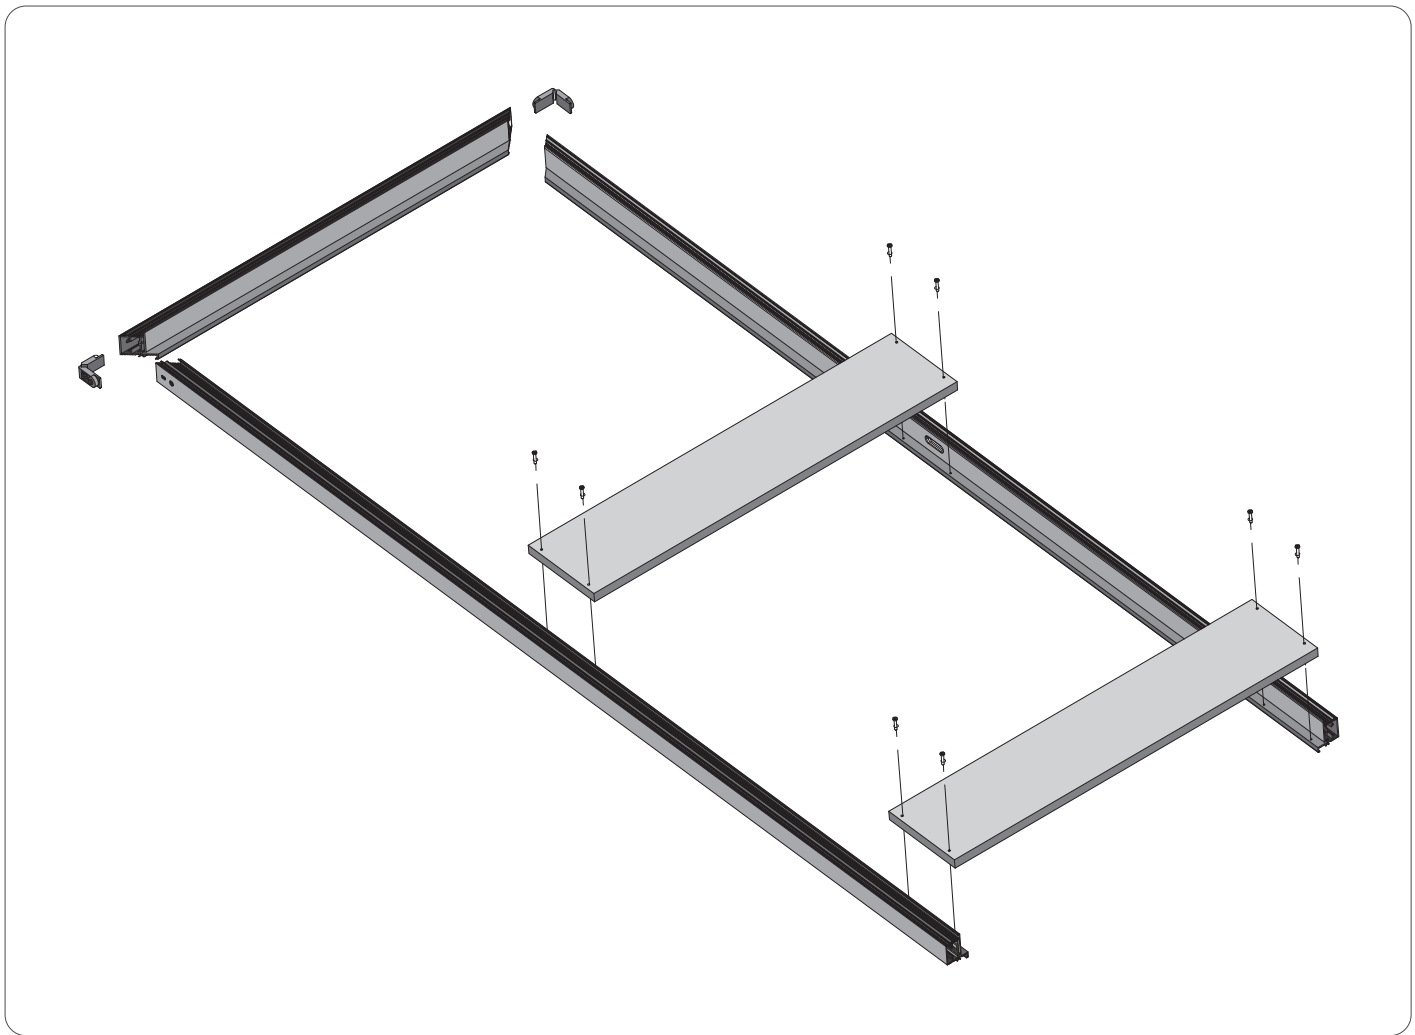

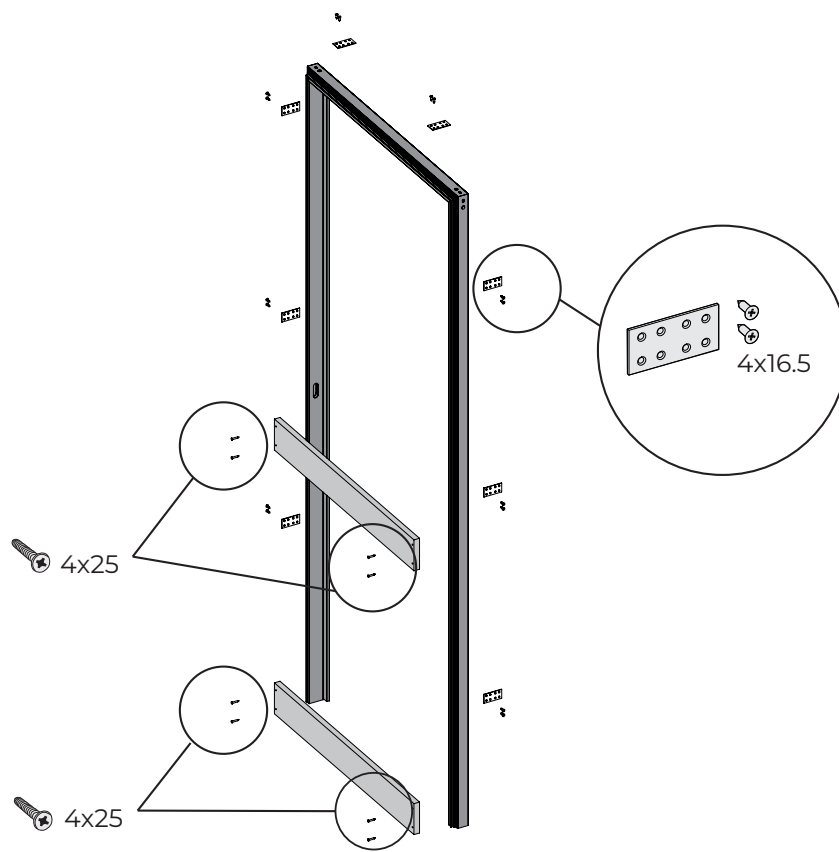

3

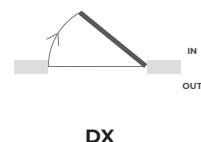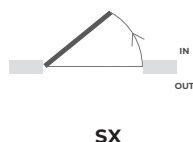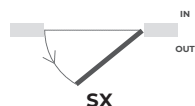


180°



90°


complanarità a tirare
pull-opening door flush with the wall
ouverture avec au ras du mur à tirer
apertura con complanaridad a tirar
компланарность при открывании на себя

complanarità a spingere
push-opening door flush with the wall
ouverture avec au ras du mur à pousser
apertura con complanaridad a empujar
компланарность при открывании от себя

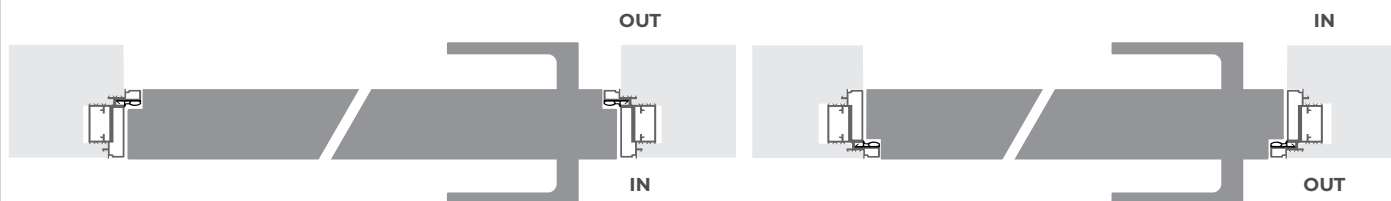


installazione su cartongesso
 drywall installation
 pose sur plaque de plâtre
 instalación sobre placas de yeso
 установка на гипсокартон

a tirare
 pull version
 à tirer
 a tirar
 “на себя”

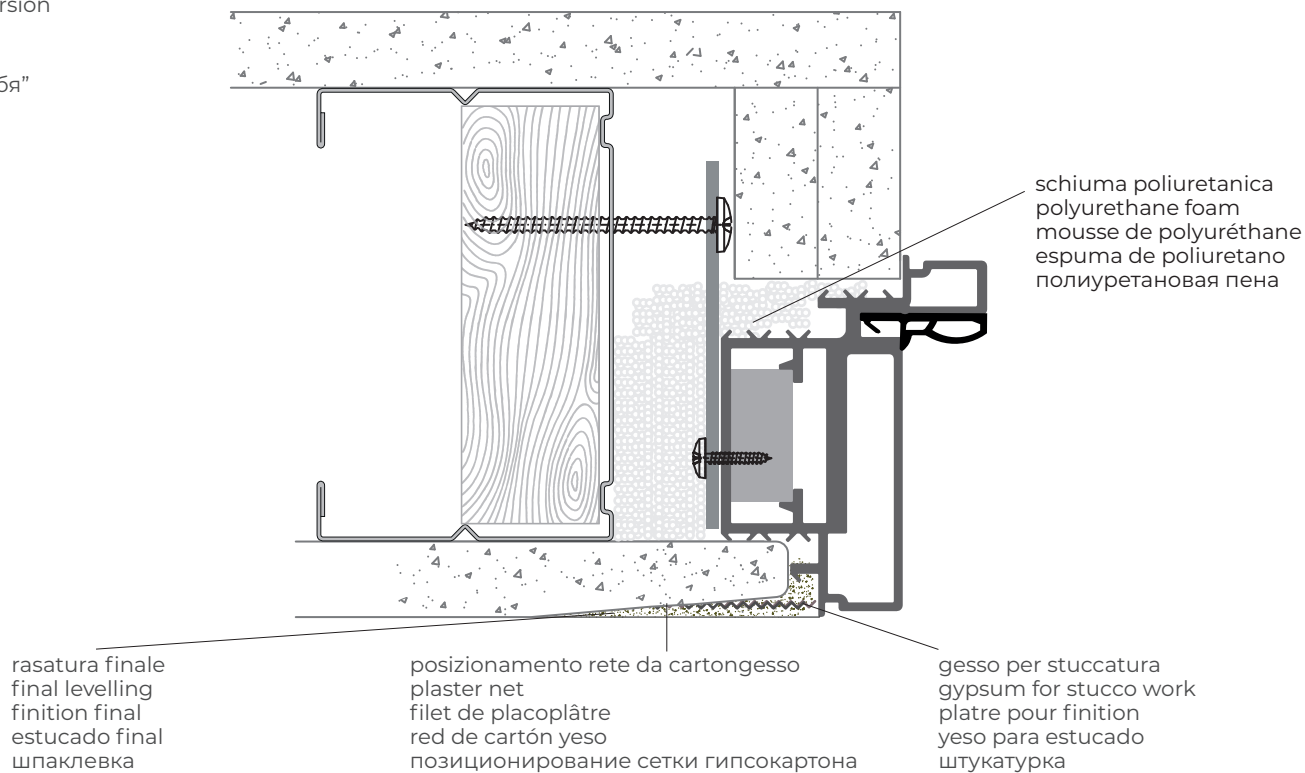


a spingere
 push version
 à pousser
 a empujar
 “от себя”

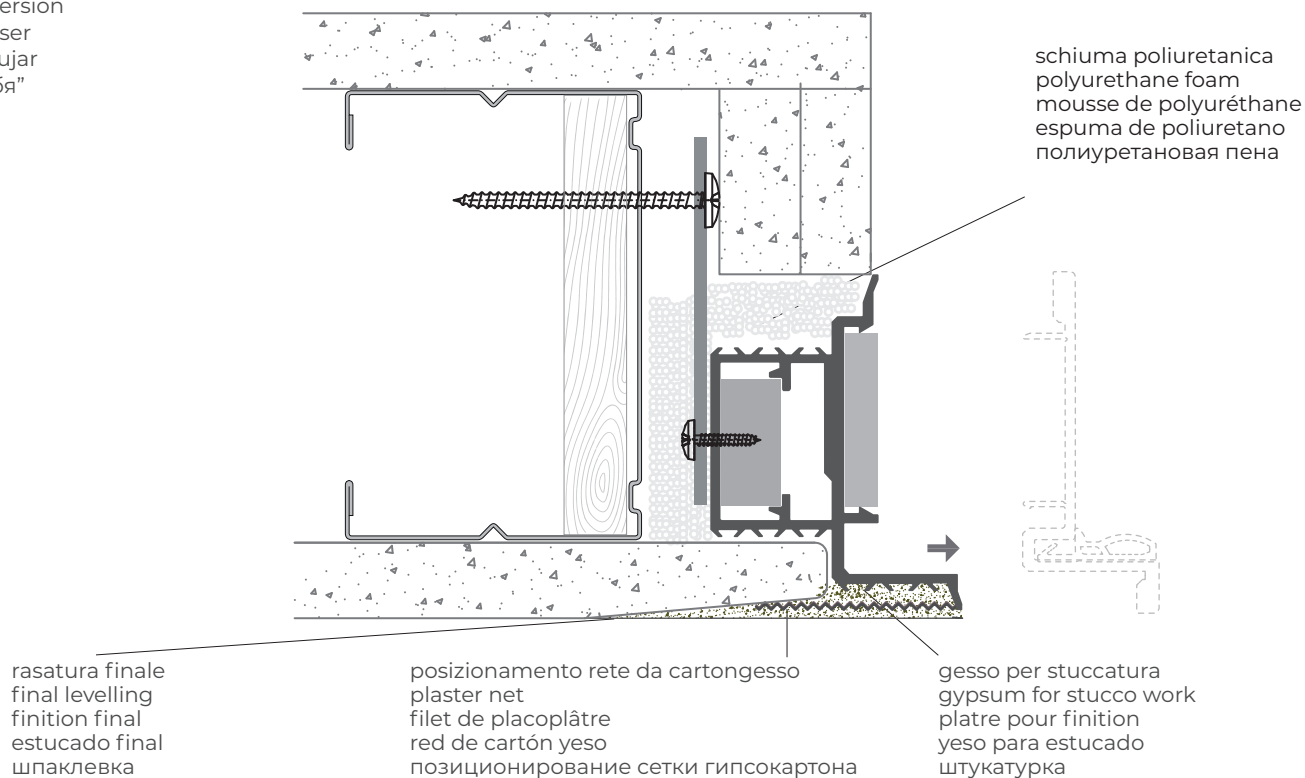




installazione su muro
wall installation
installation murale
instalación en pared
установка на стену

a tirare
pull version
à tirer
a tirar
“на себя”

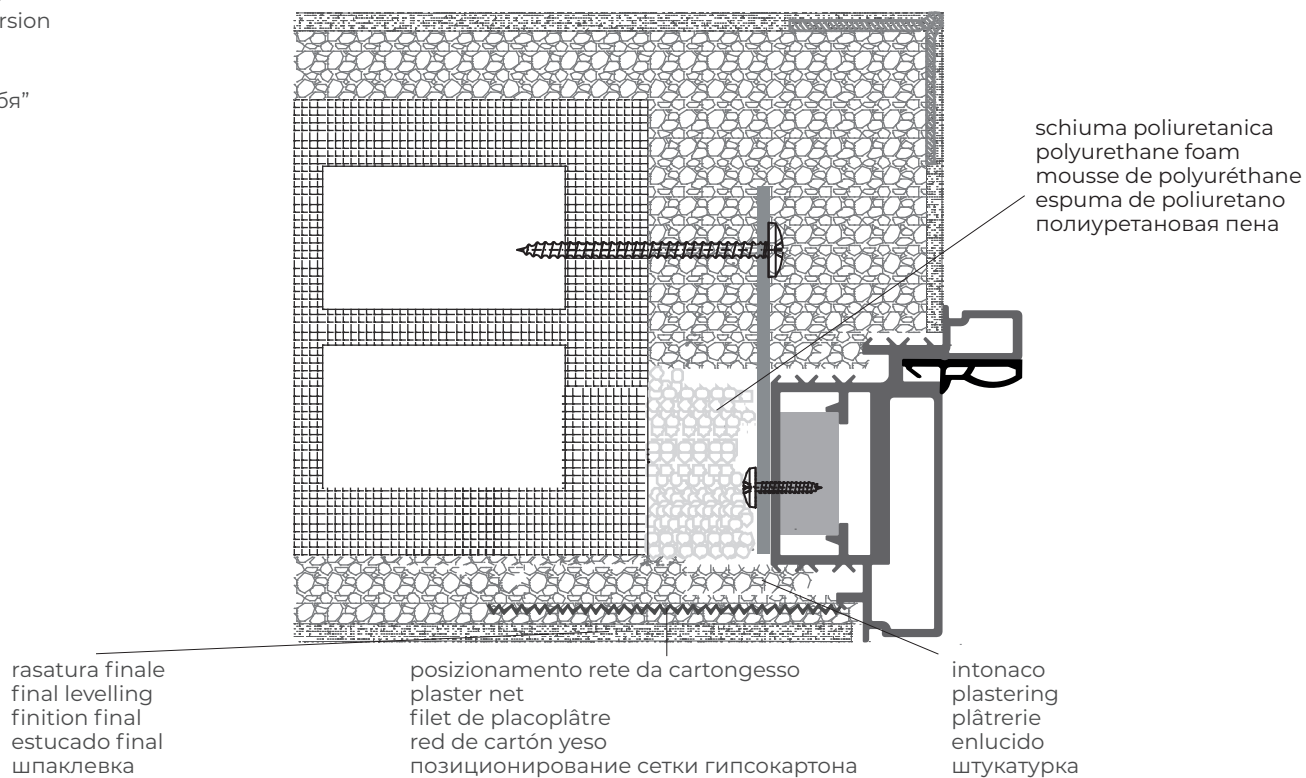


a spingere
push version
à pousser
a empujar
“от себя”






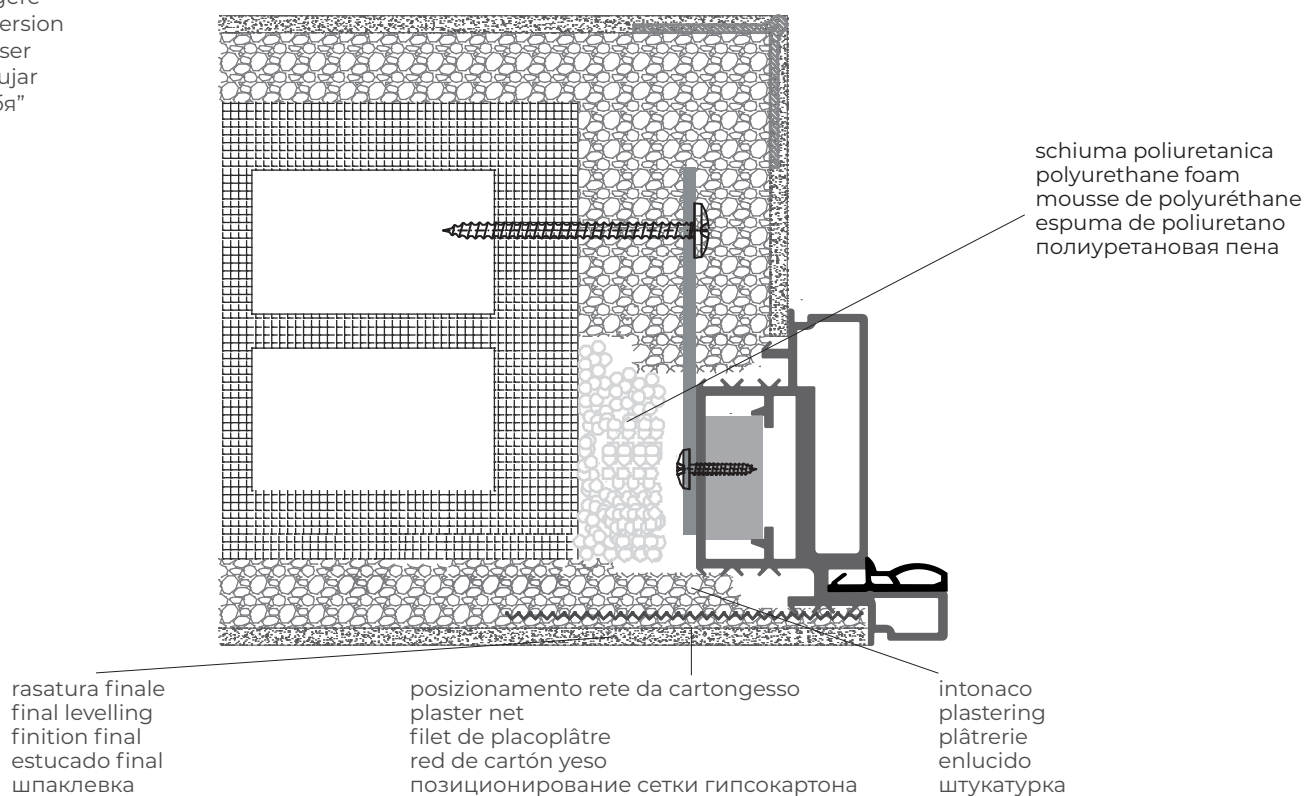


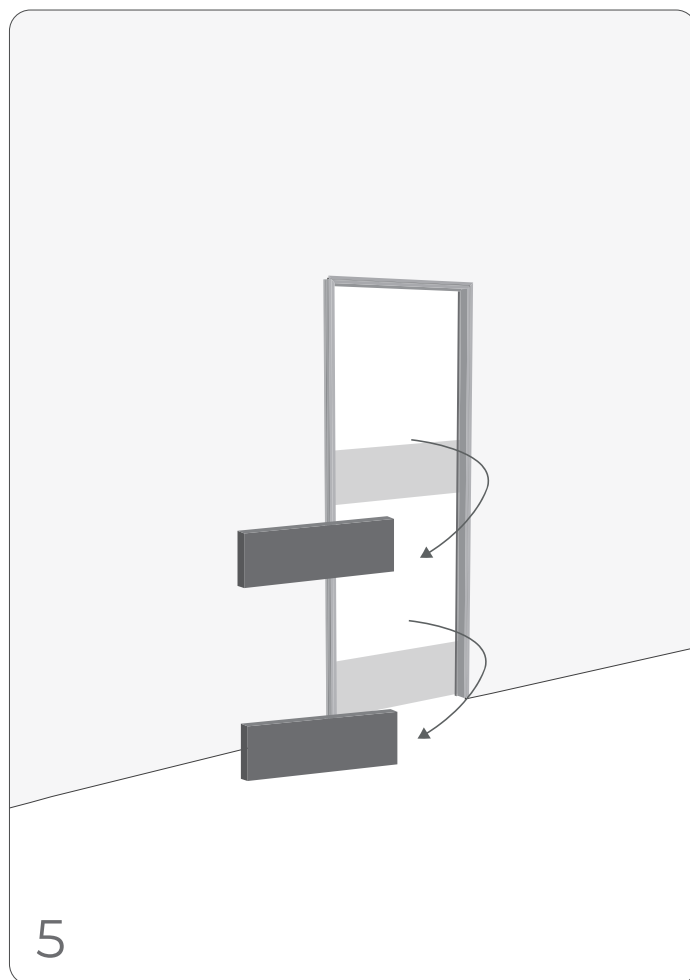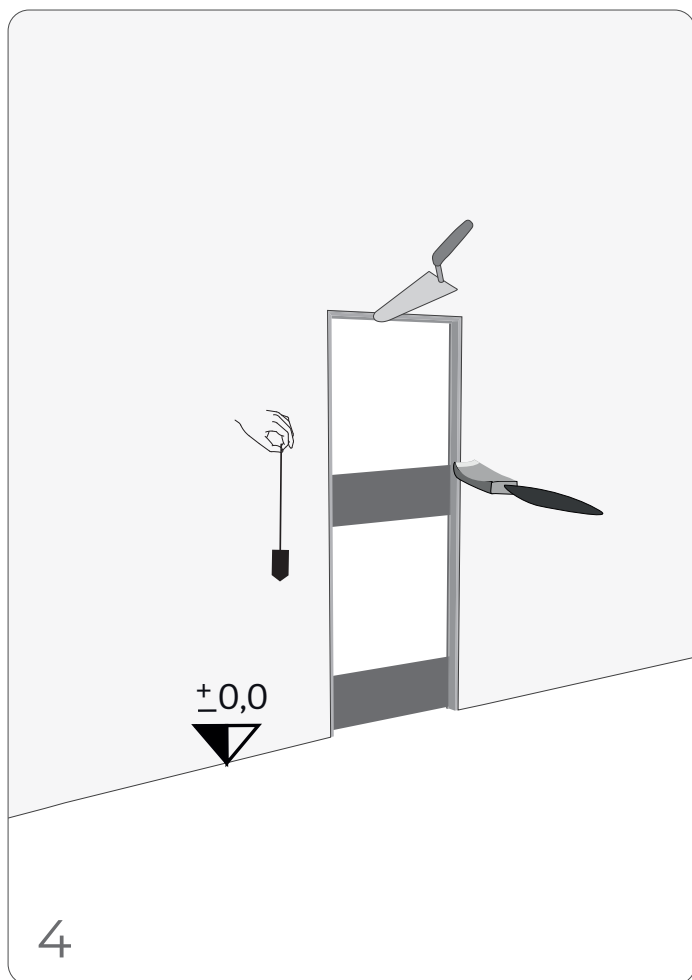

Installazione guarnizione
Gasket installation
Pose de joint
Instalación de juntas
Установка прокладки

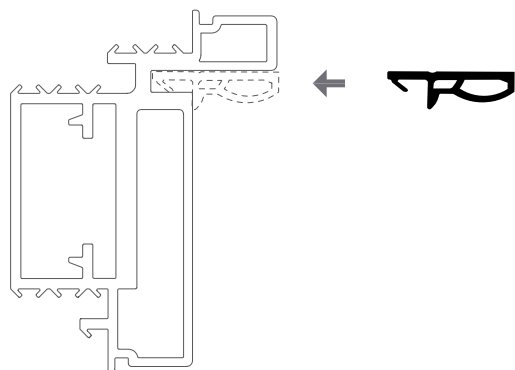

fissaggio anta legno
 wooden leaf fixing
 fixation du vantail en bois
 fijación de la hoja de madera
 крепление деревянной створки

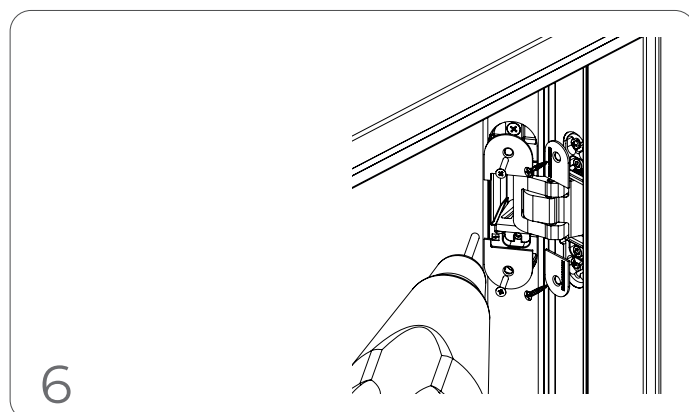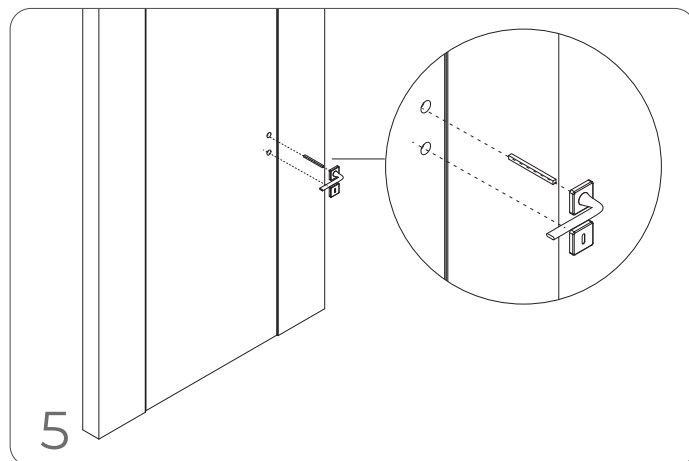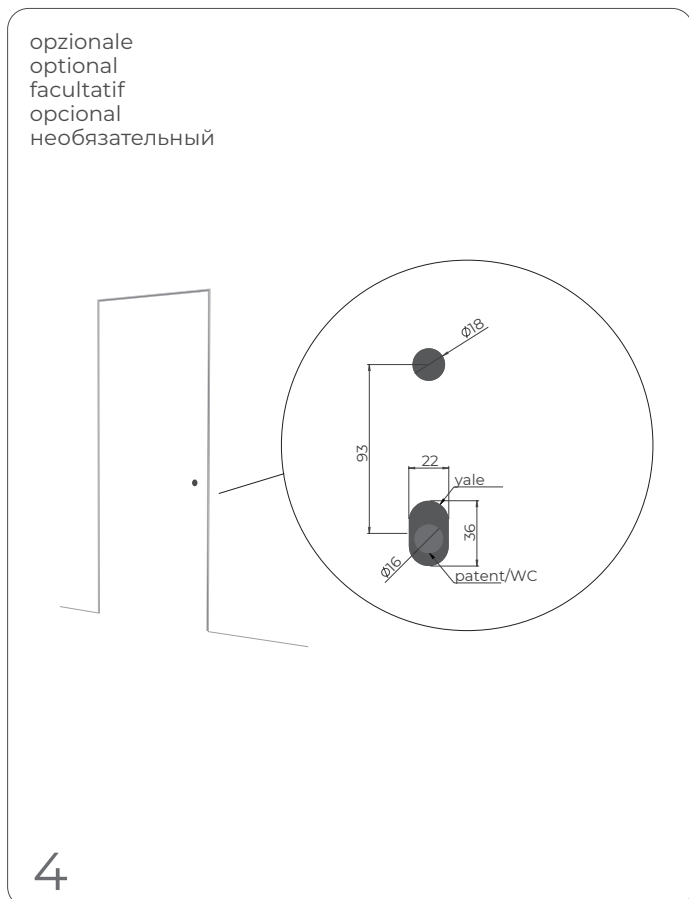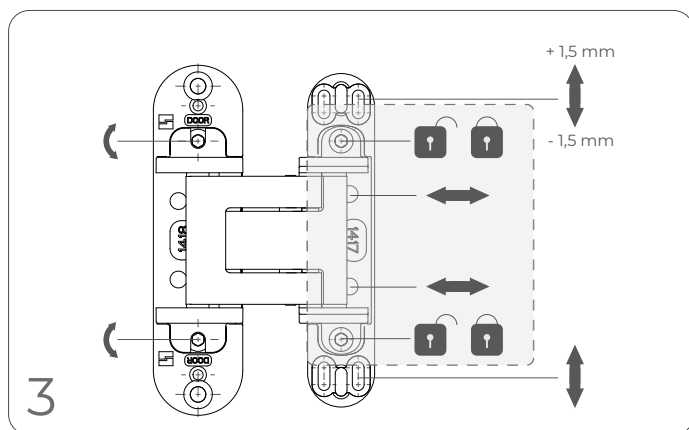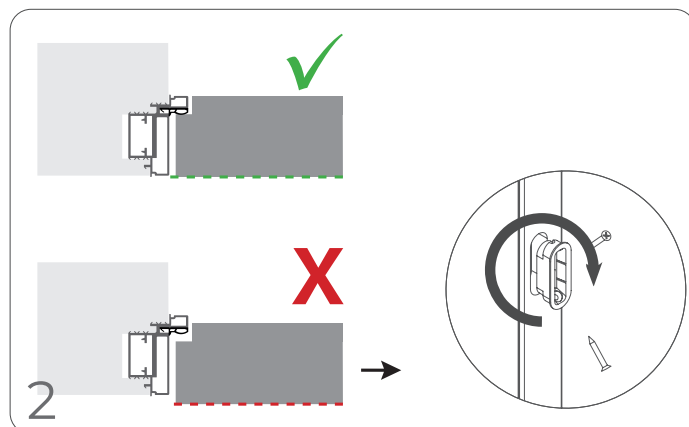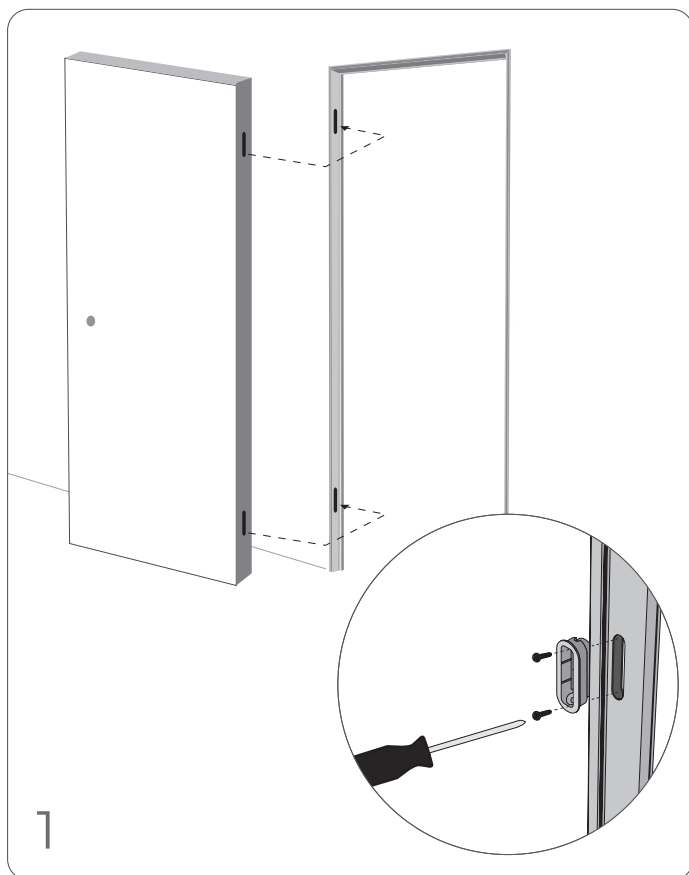

fissaggio anta in alluminio
 aluminum leaf fixing
 fixation du vantail en aluminium
 fijación de la hoja de aluminio
 крепление алюминиевой створки

