
Ceiling mounting options for a false ceiling for the Fragment line light fixture - recessed canopy

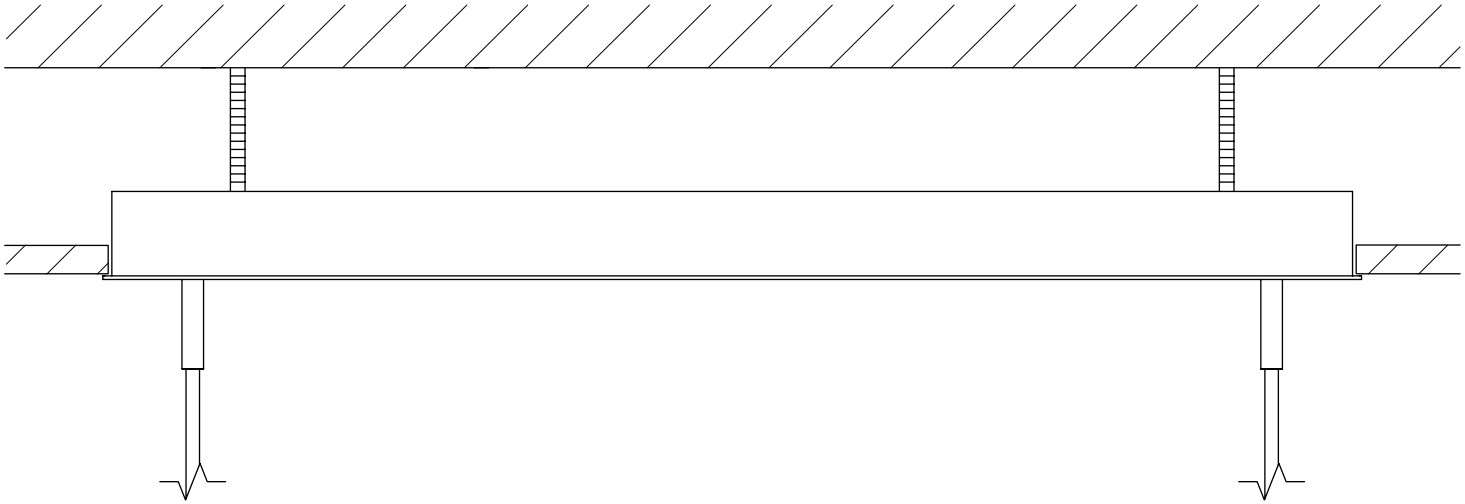

bomma


Installation Manual
for Pendant Light Fixtures

Keep for later use!

1


Print the 1:1 template and stick it to the floor exactly below the place on the ceiling where you want to hang the light.

download link for the 1:1 installation template

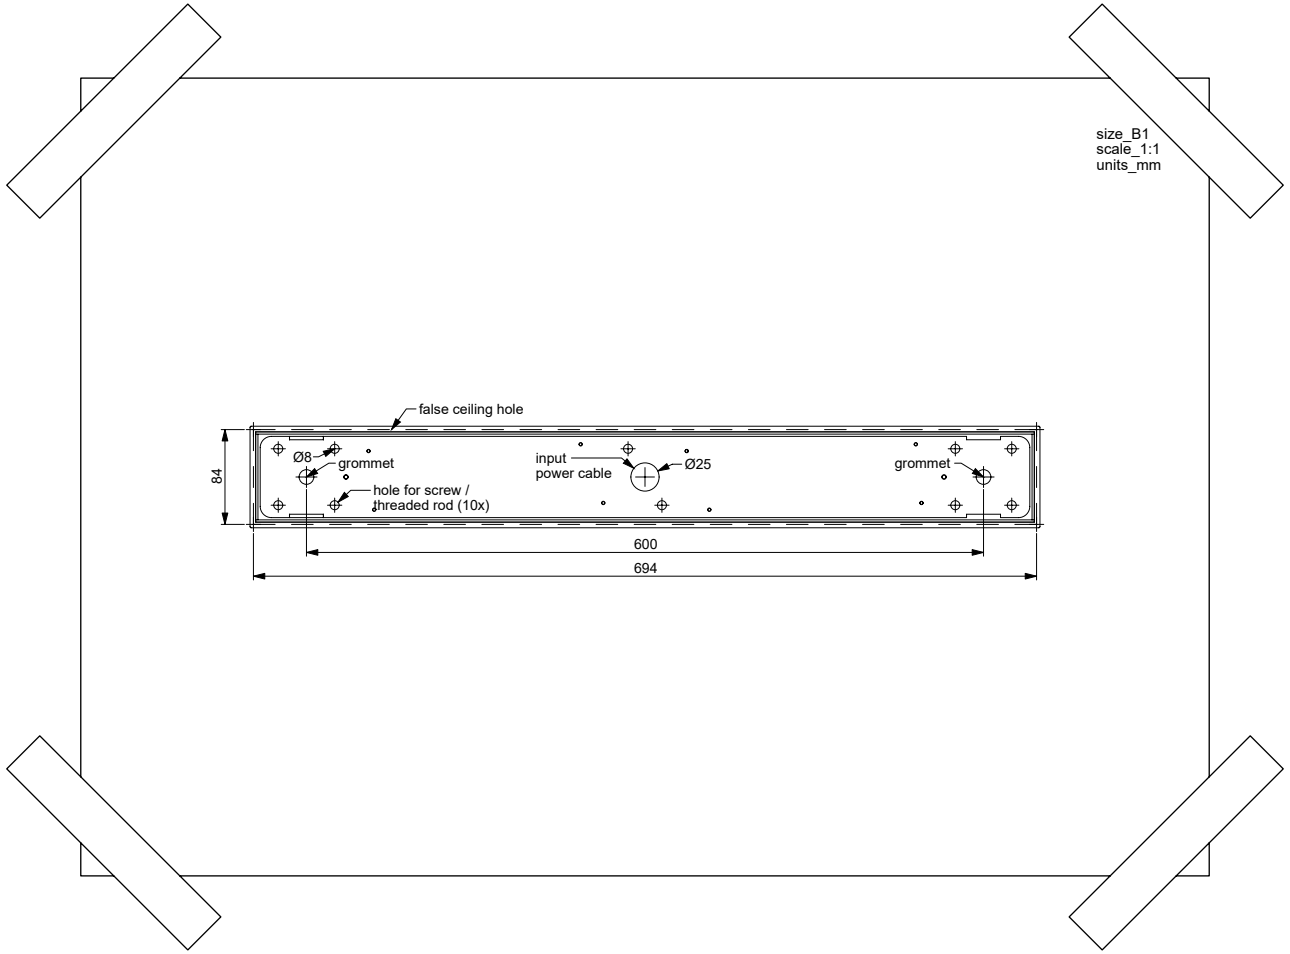


2

Using a levelling laser, mark 4 points on the ceiling - the corners of a rectangular hole (694 x 84 mm) for recessing the canopy.

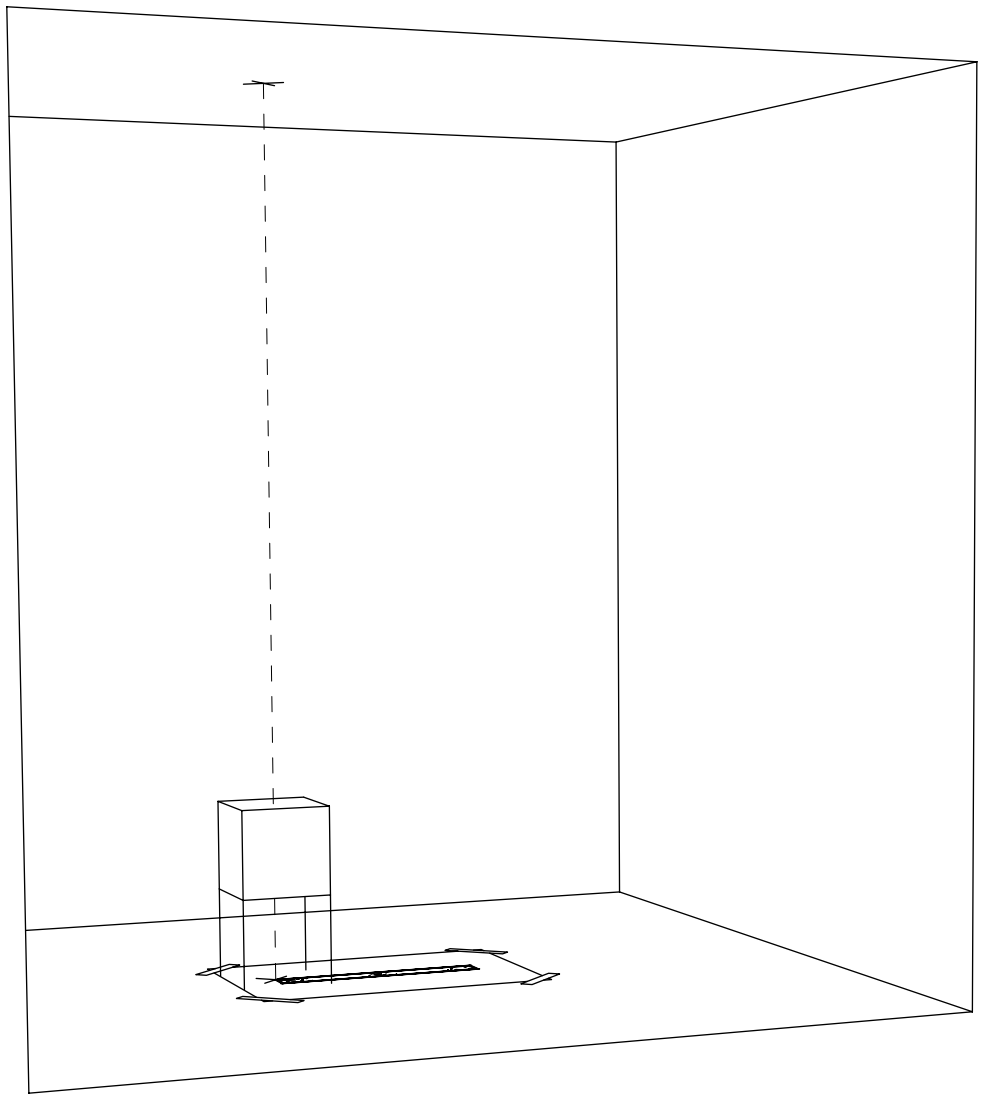


3

Cut a 694 x 84 mm hole in the false ceiling.

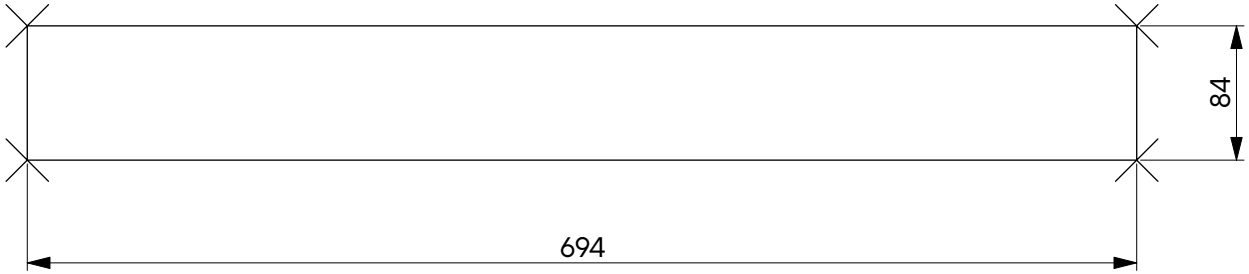


4

Mark the points where the threaded rods will go on the solid ceiling under the plasterboard using a laser.

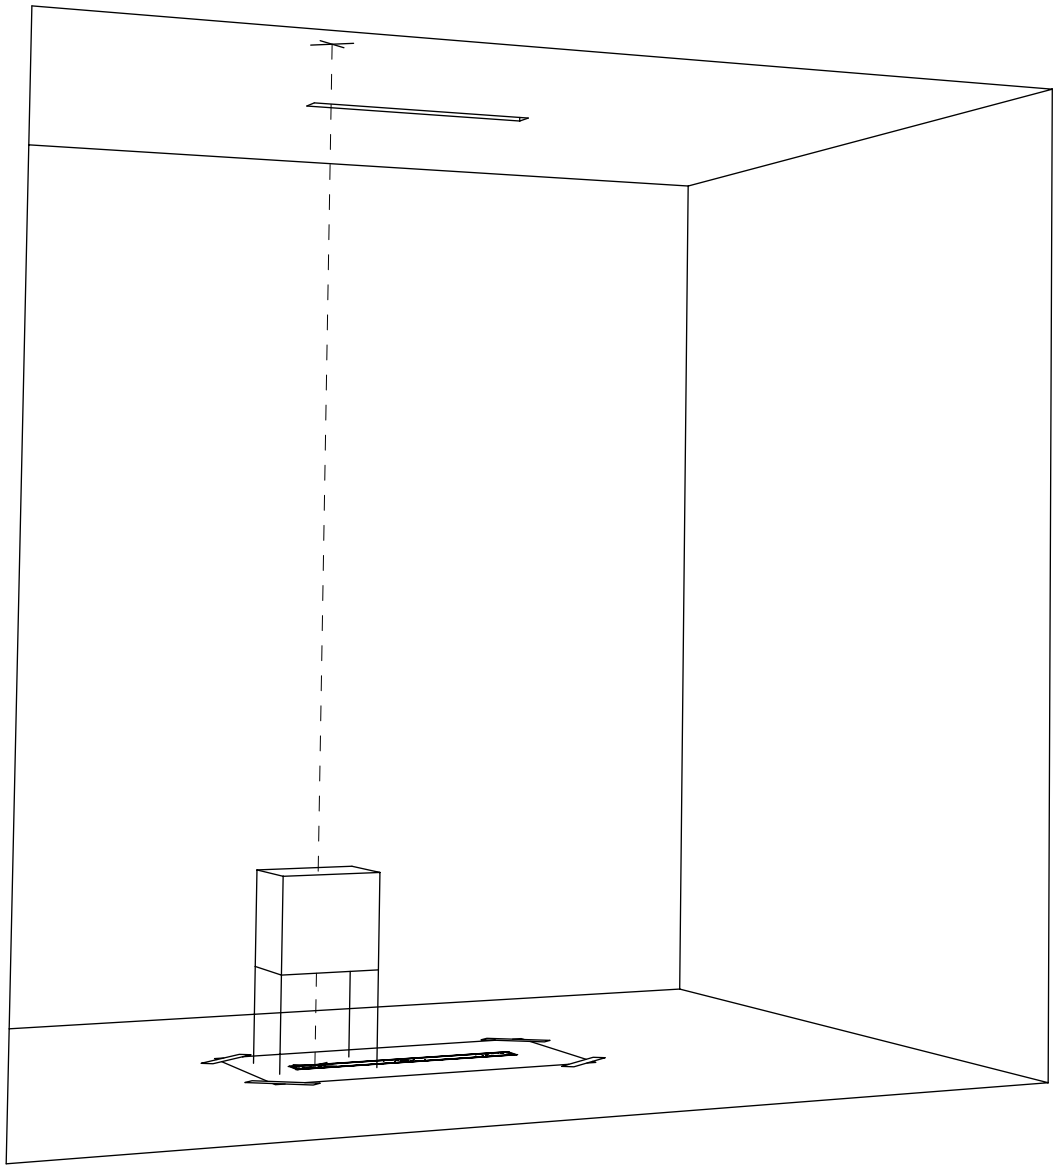


5

Drill holes for the threaded rods (max. diameter of the threaded rods is 8 mm). Secure the threaded rods using chemical anchors. The threaded rods should end approximately at the level of the false ceiling, but not lower.

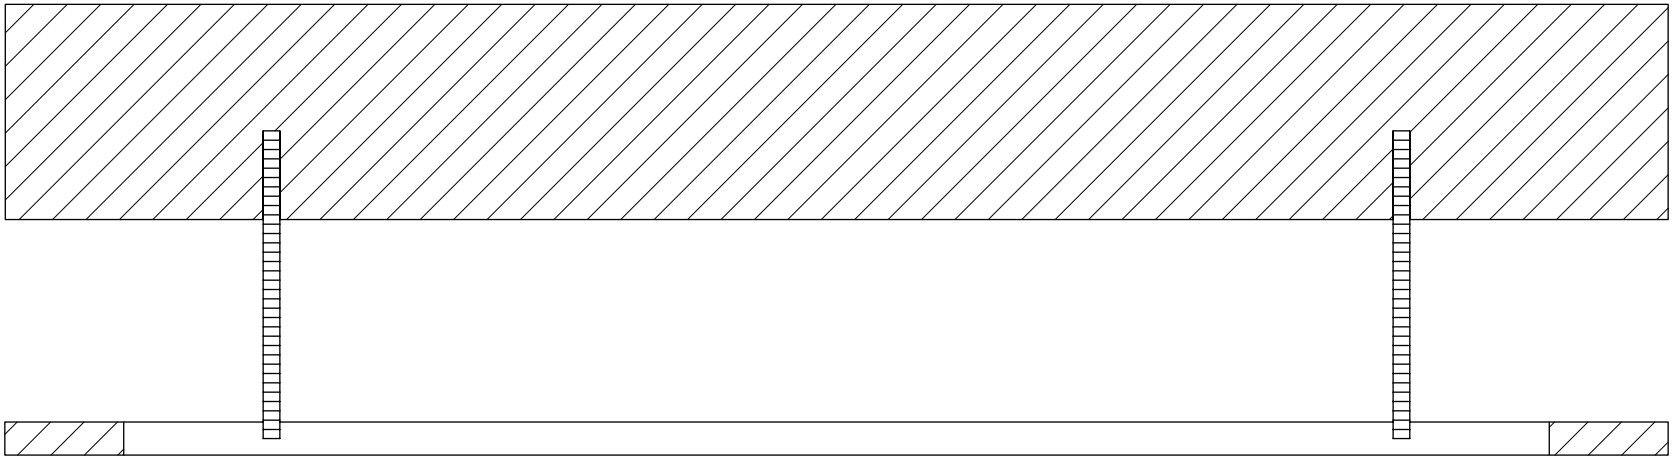


6

Attach the anchor plate to the threaded rods so that the lowest parts of the anchor plate end at the same place as the underside of the false ceiling.

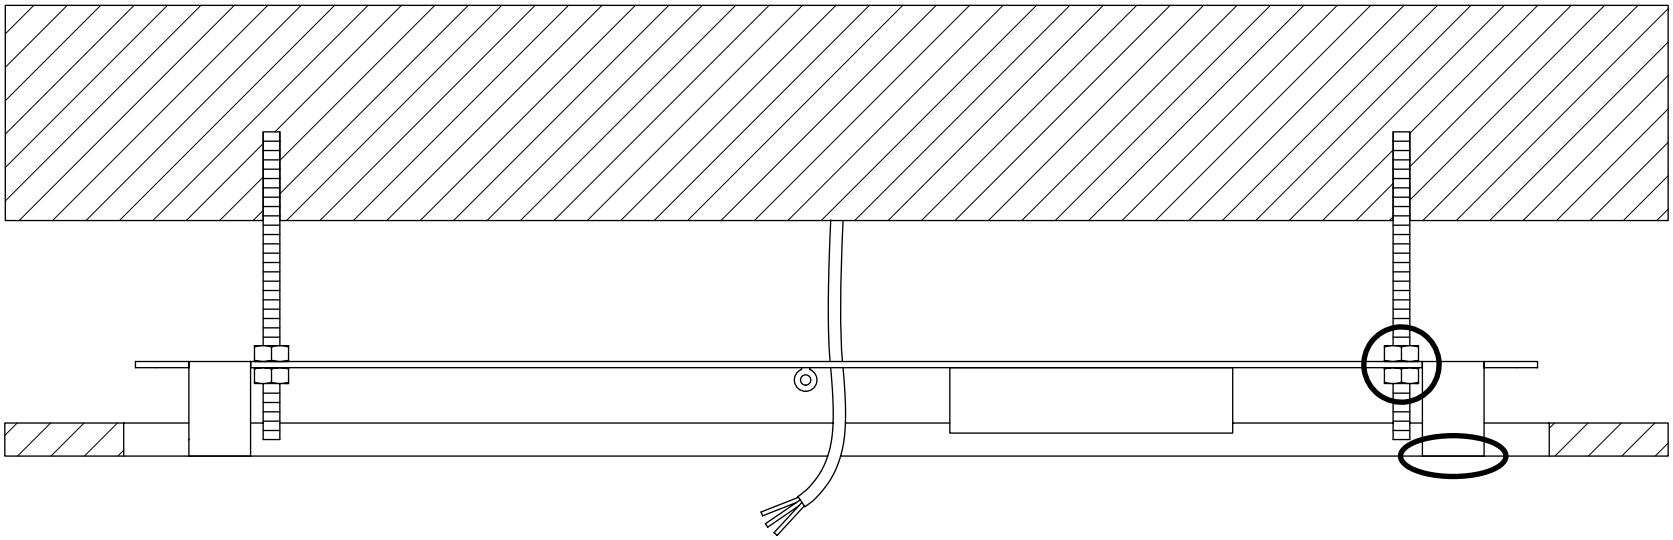


7

Attach the canopy to the anchor plate.

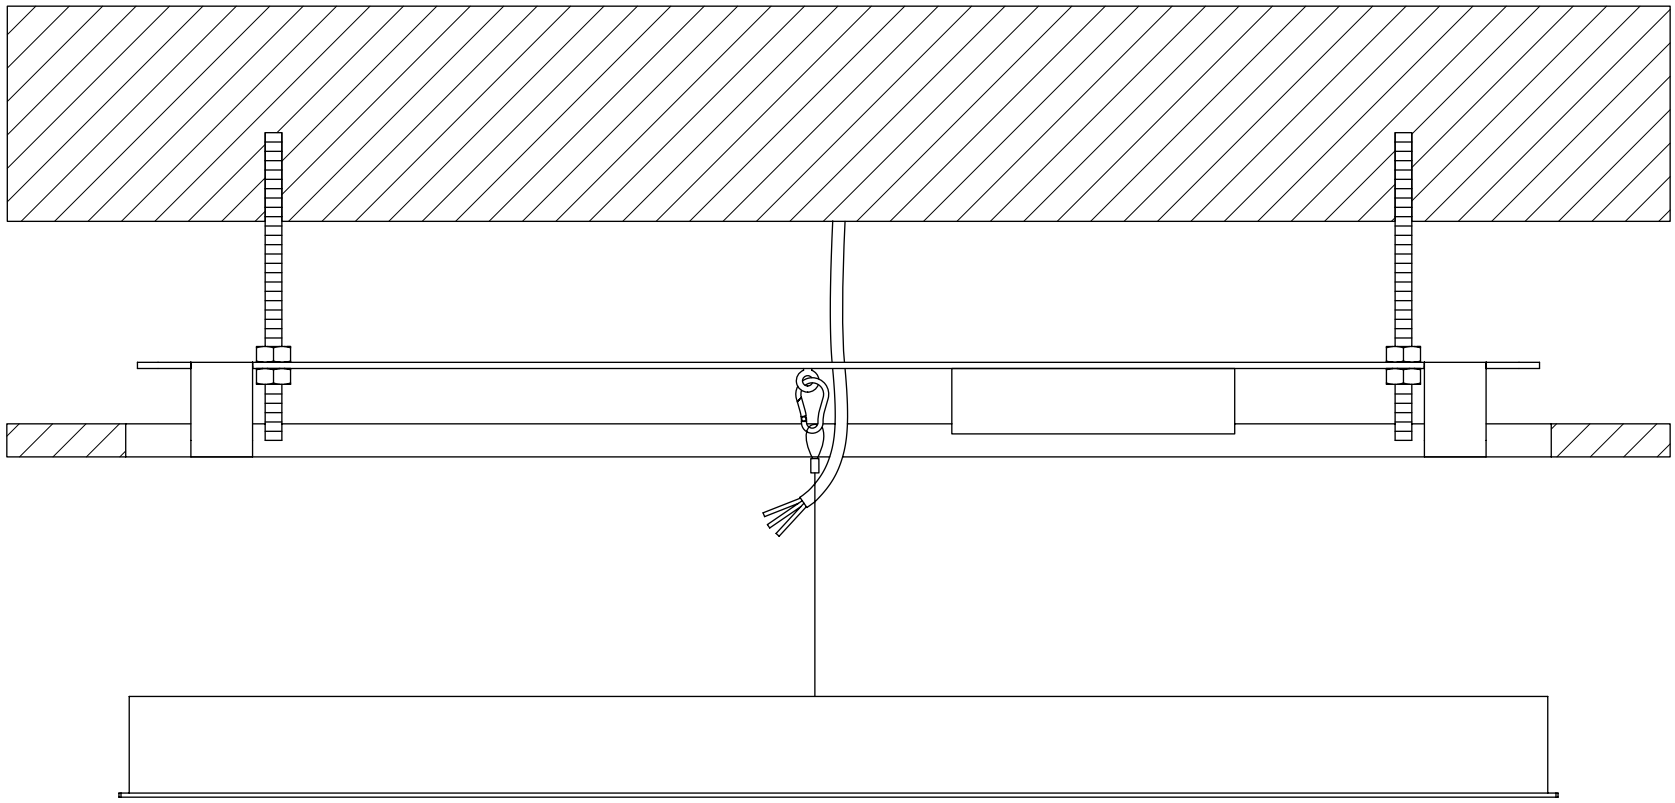


8

Shorten the cables from the mounting to required length (100mm is used for connecting the cable inside the canopy).
Thread the cables through the tubes as shown in the diagram.
There are plastic grommets at the bottom of the tubes.
If the grommets come loose during installation, insert them back into the tubes.

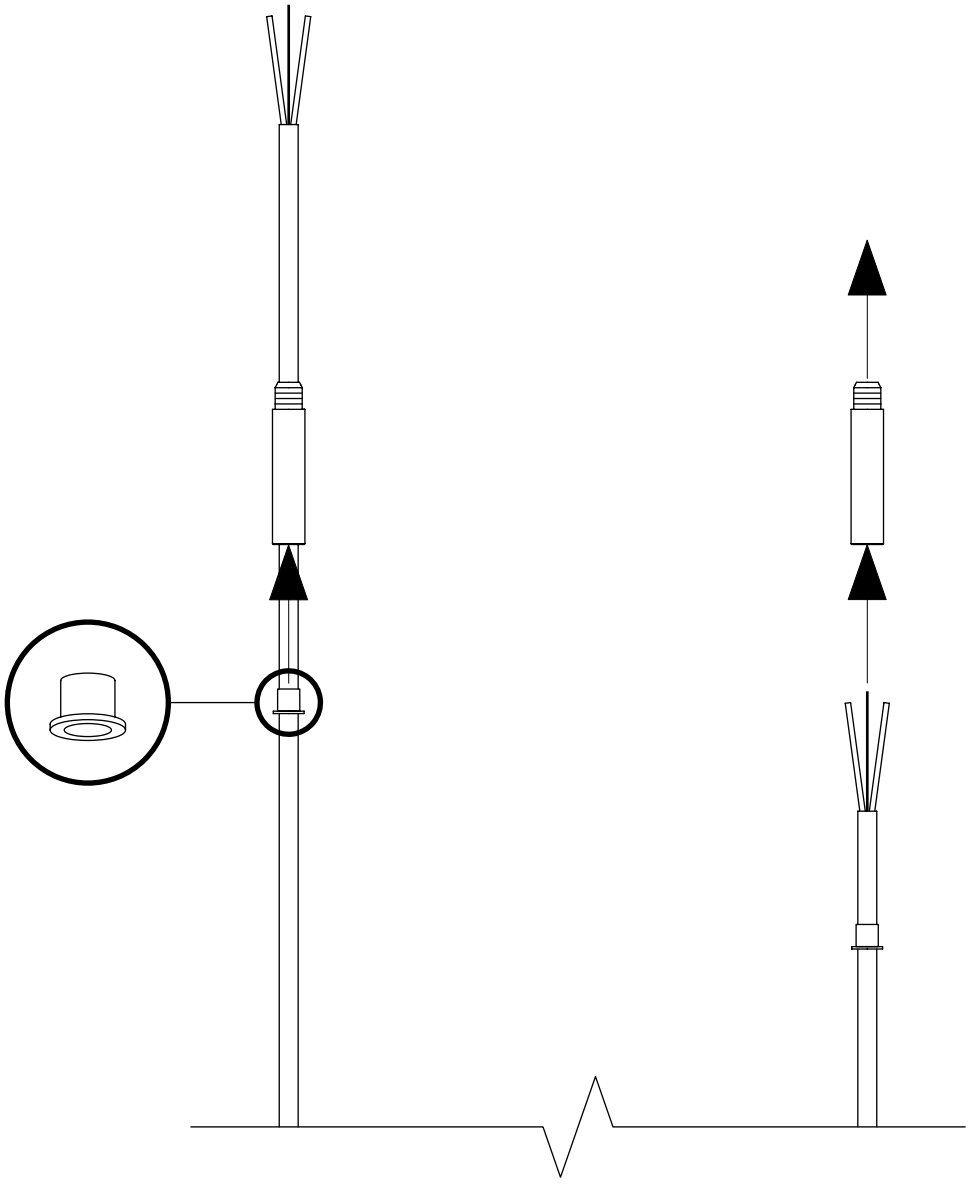

9

Thread the cables through the canopy cover. If you wish, you can paint the canopy cover to match the ceiling color before this step. Insert the steel wires from both cables into the Reutlingers. The steel wire end must protrude on the upper side of the reutlinger at least 25 mm. Attach the pull-out safety device to the end of the steel wire.

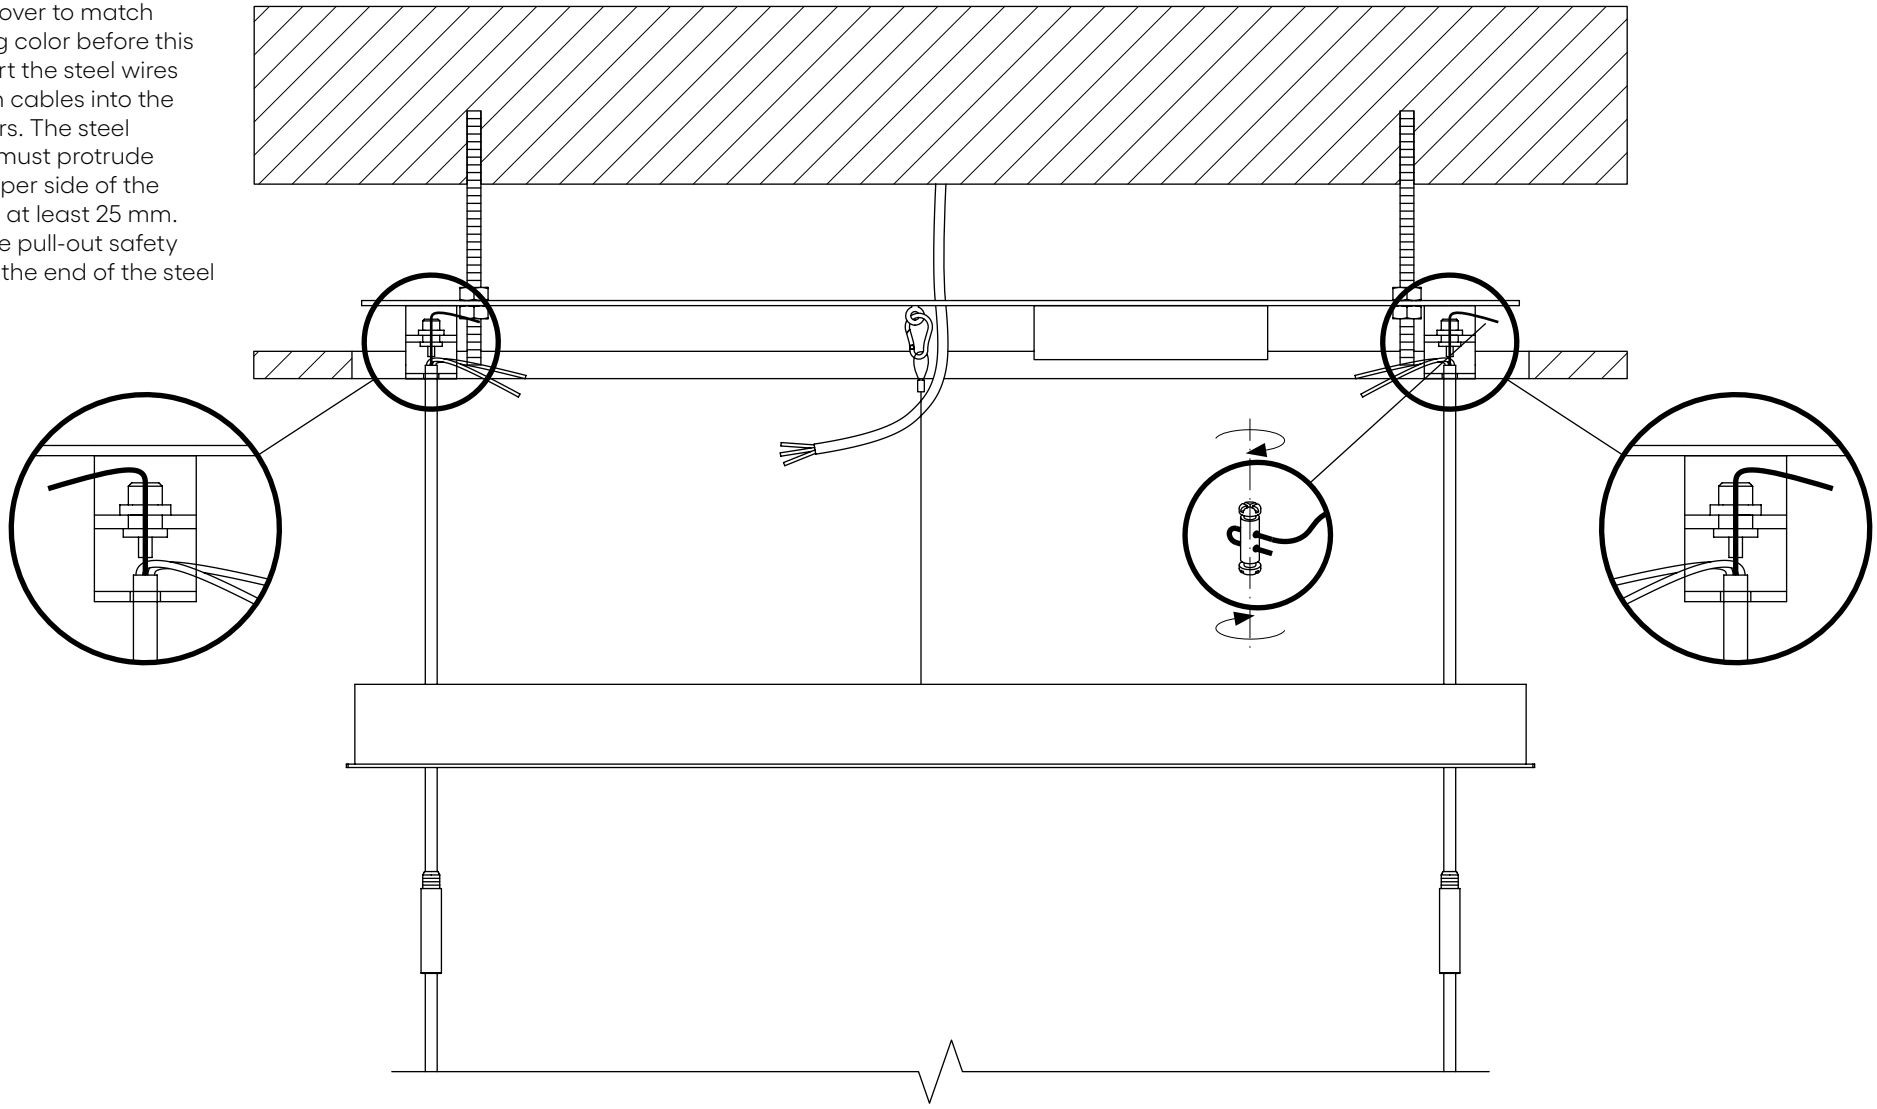

10

Install the wiring according to the diagram.
Attention! Wrong connection can destroy both the driver and the light source.

EU


Input:
Brown = L
Blue = N
Yellow green = PE

Output:
Red / Brown = +
Black / Blue = -

USA


Input:
Black = L
White = N
Yellow green = PE

Output:
Red = +
Black = -

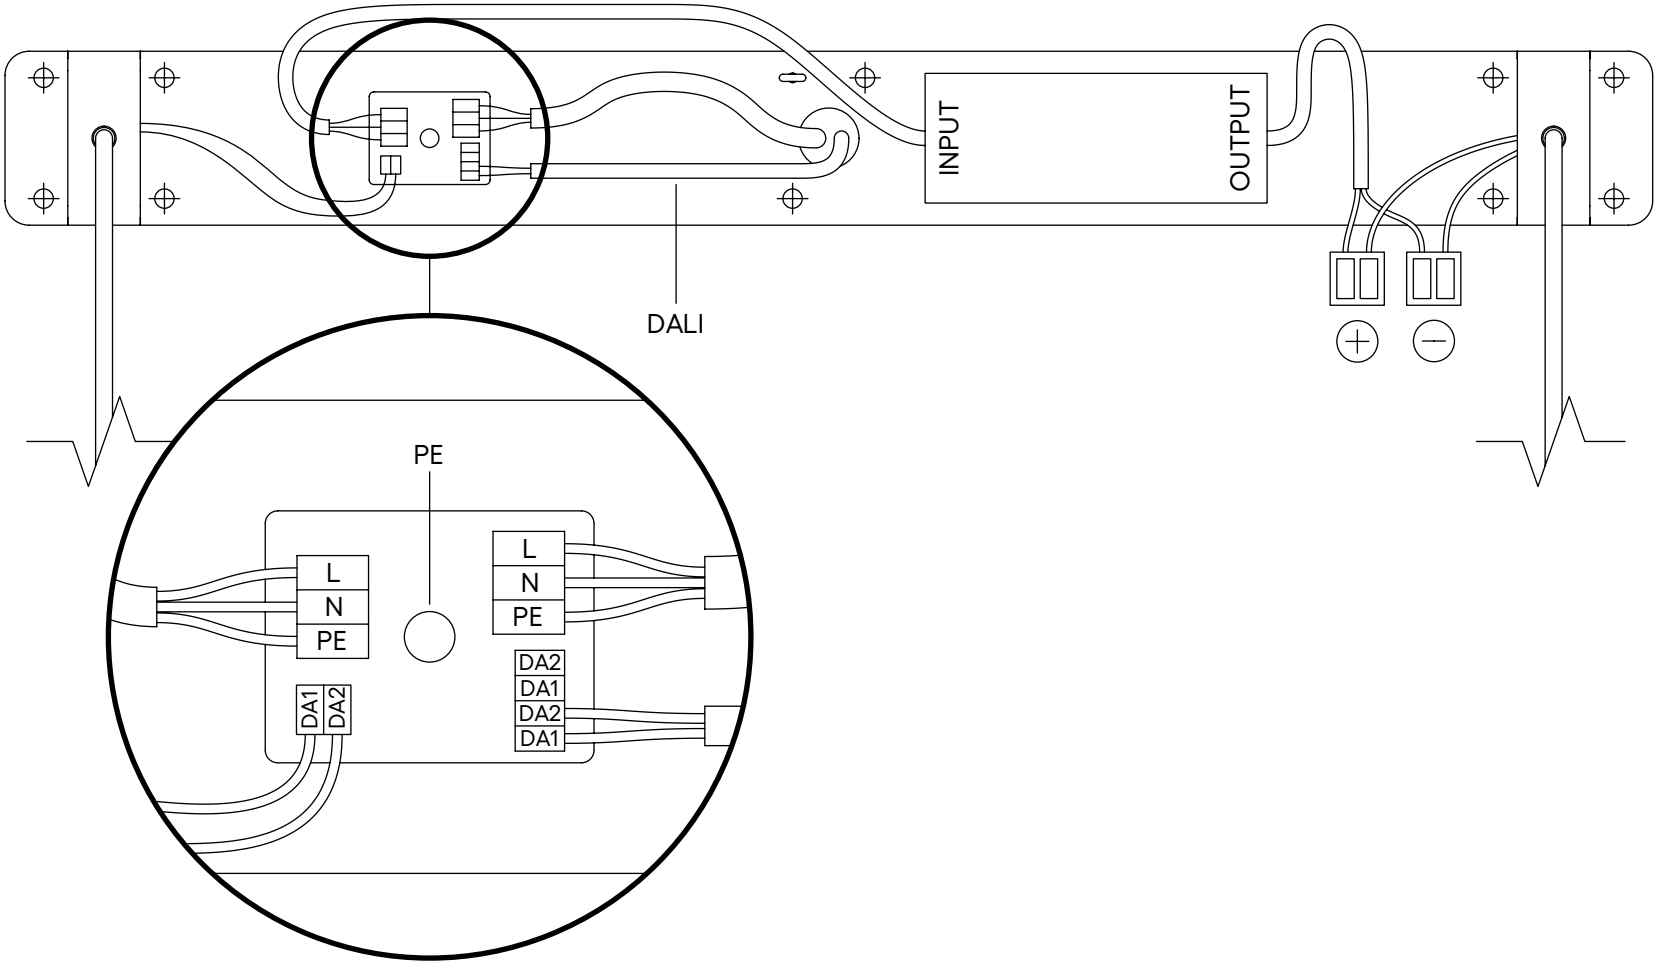


11

Slide the canopy cover up to the ceiling. Then screw the tubes back into the threads on the mounting plate.

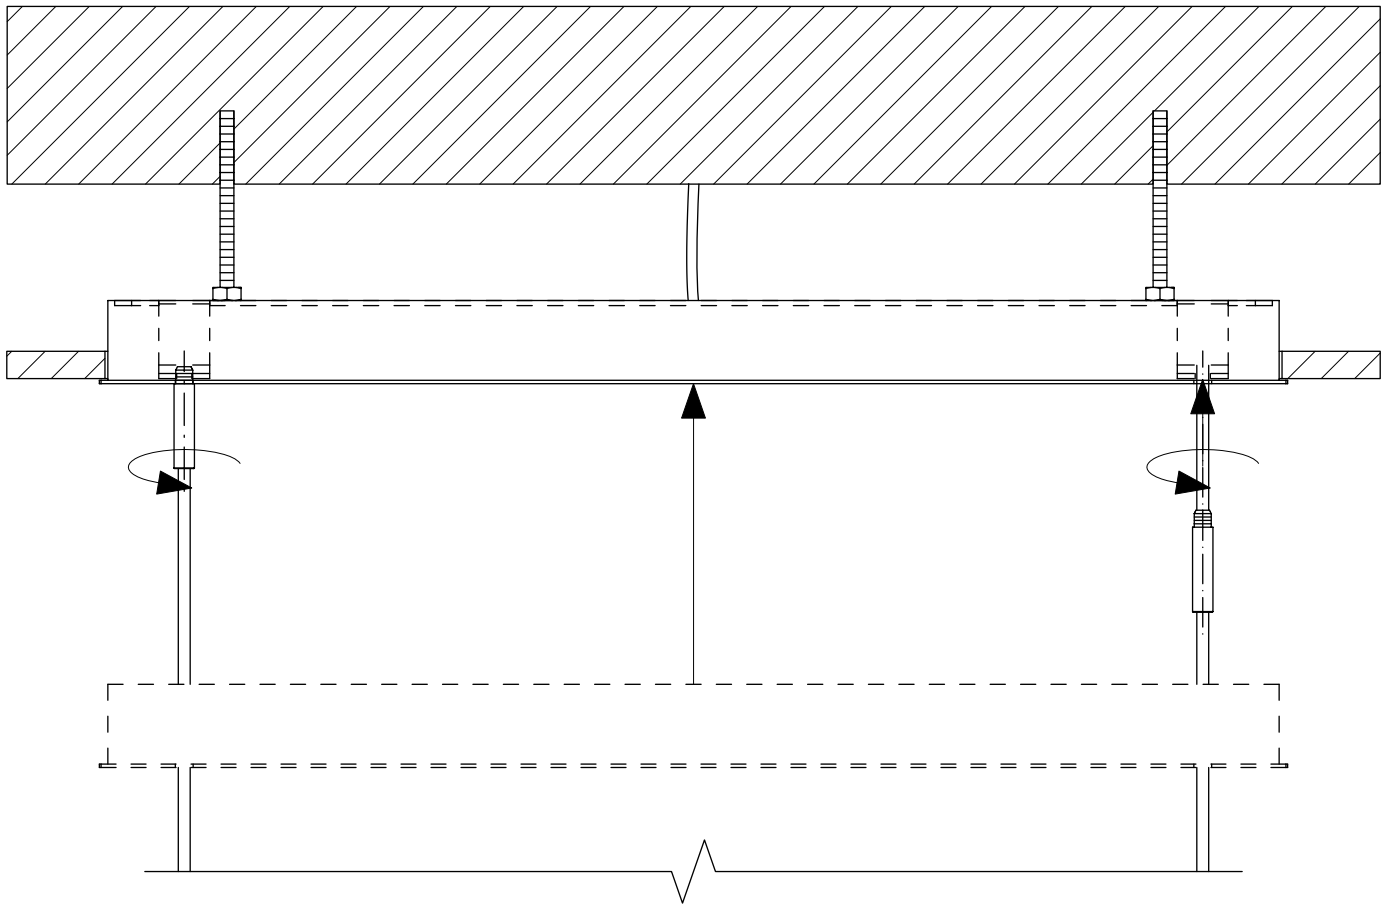

12

Congratulations! You have successfully completed the installation of the recessed canopy into the false ceiling.

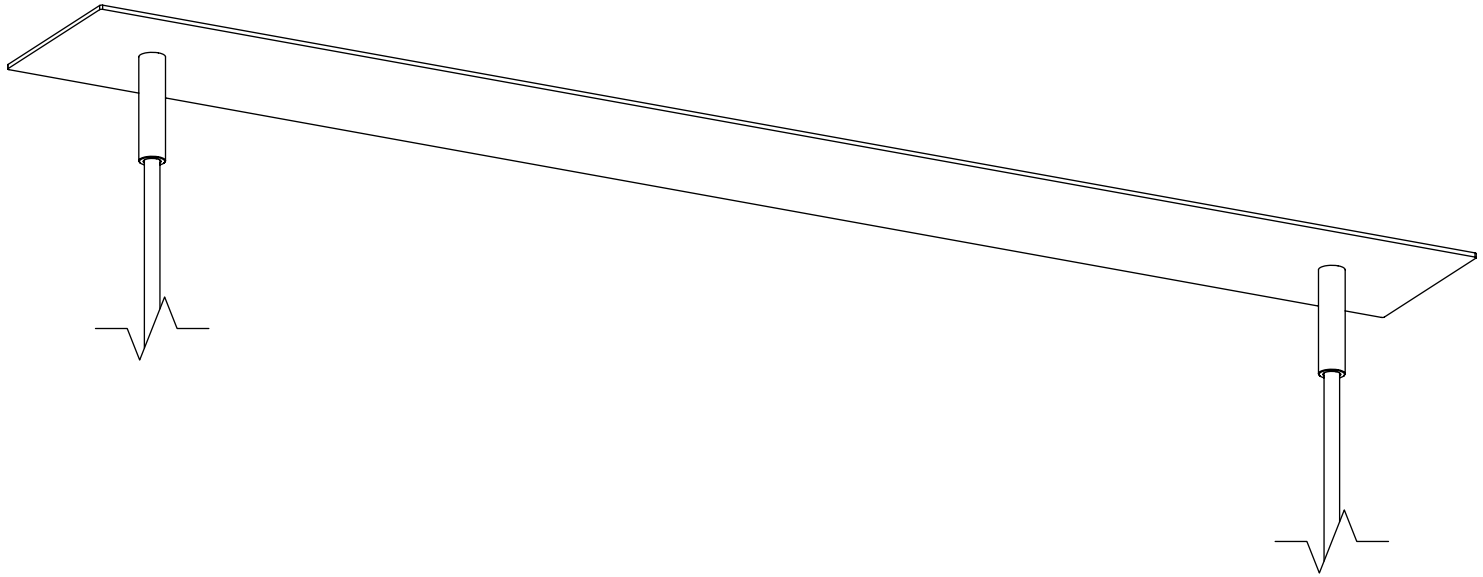

step beyond