
# Ceiling mounting options for a false ceiling for the Fragment line light fixture - grommets

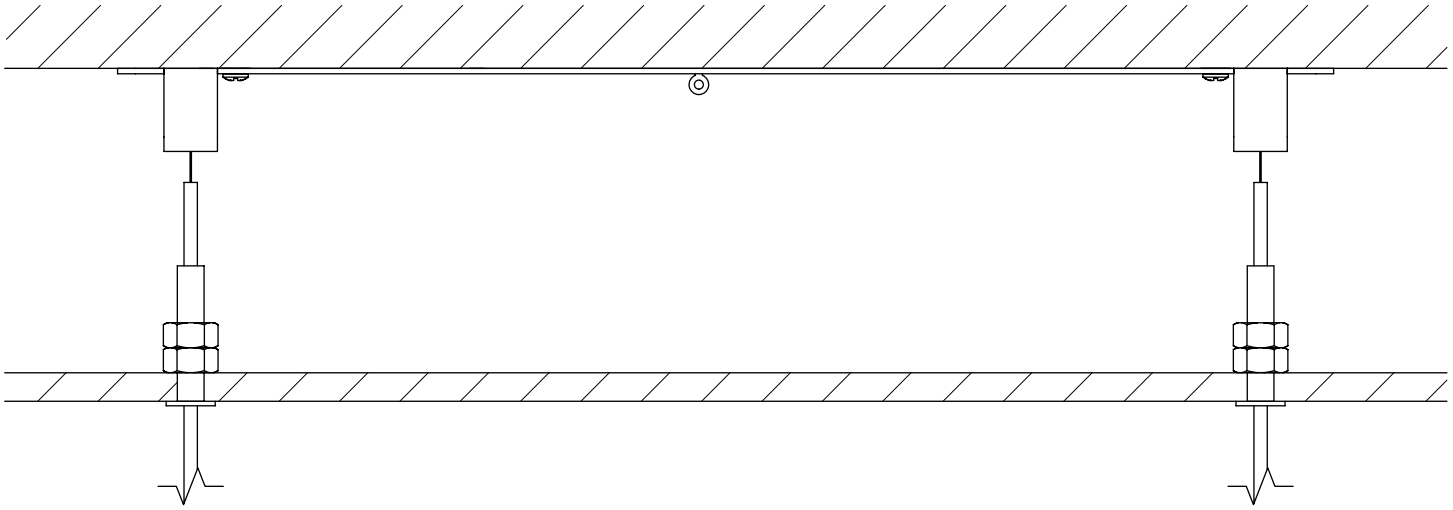

bomma

Installation Manual
for Pendant Light Fixtures

**Keep for later use!**


1

**REMOTE INSTALLATION OF THE DRIVER**

For installation using grommets, it is recommended to install the driver in a location where it can be easily serviced.


Print the 1:1 template and stick it to the floor exactly below the place on the ceiling where you want to hang the light.

download link for the 1:1 installation template

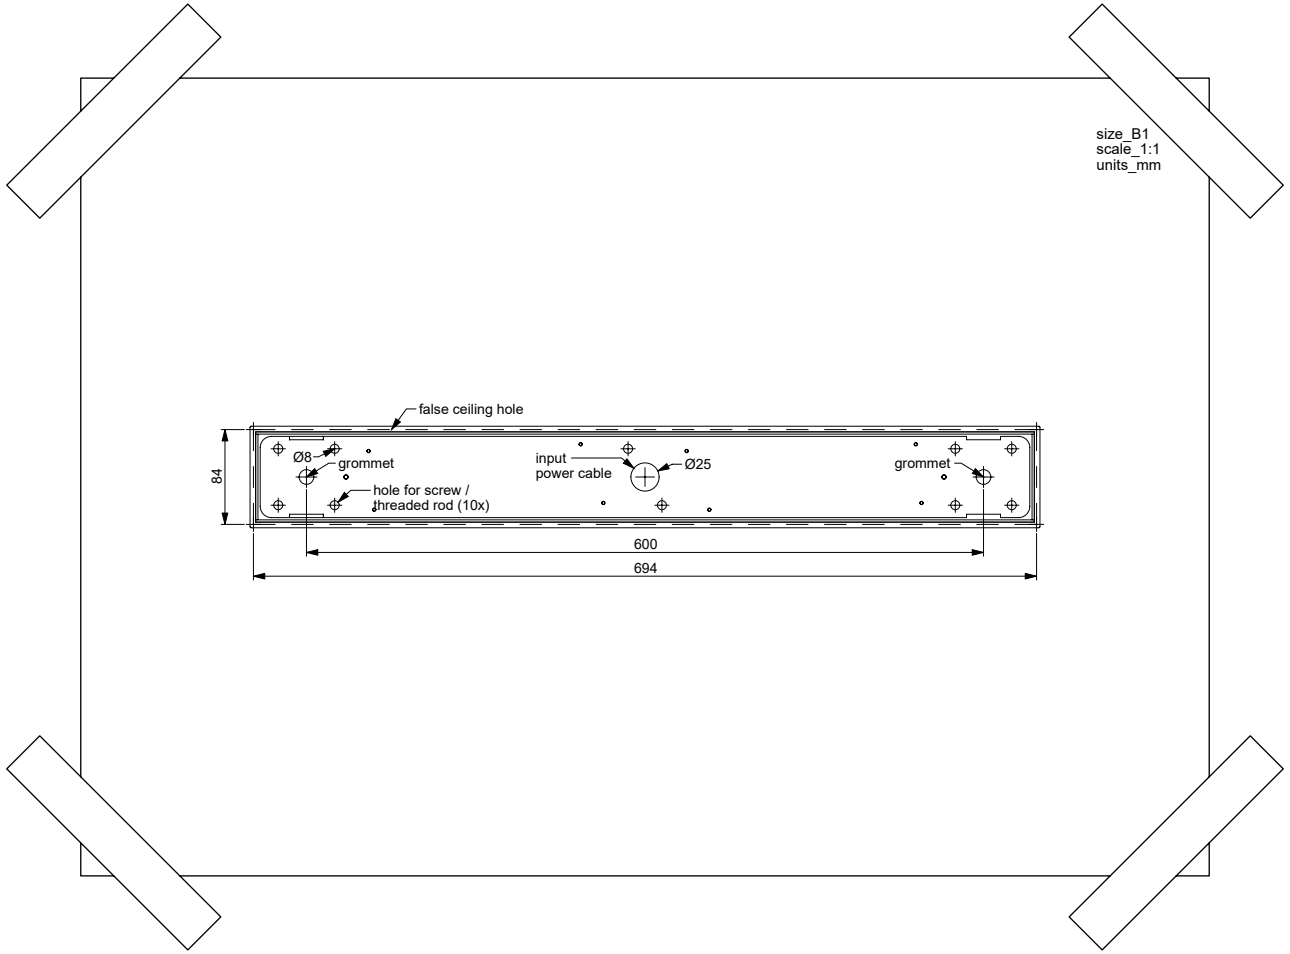


**2**

Using a levelling laser, mark 2 points on the ceiling (600 mm apart) where the grommets will be.

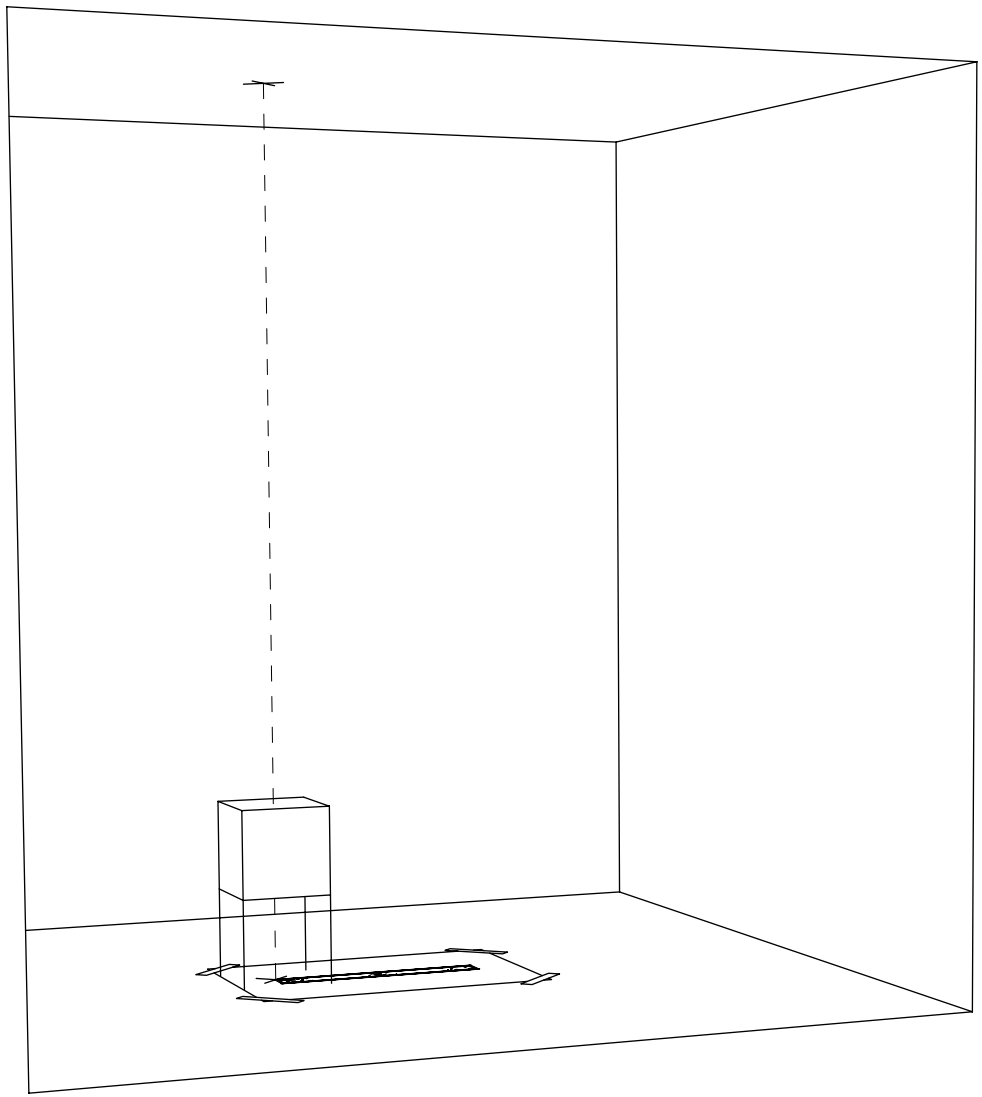


**3**

Drill holes with a diameter of 13 mm in the false ceiling.

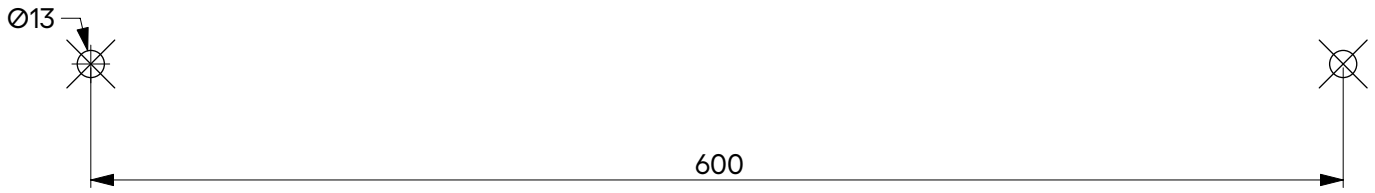


**4**

Cut a hole large enough to attach
the anchor plate to the solid ceiling.

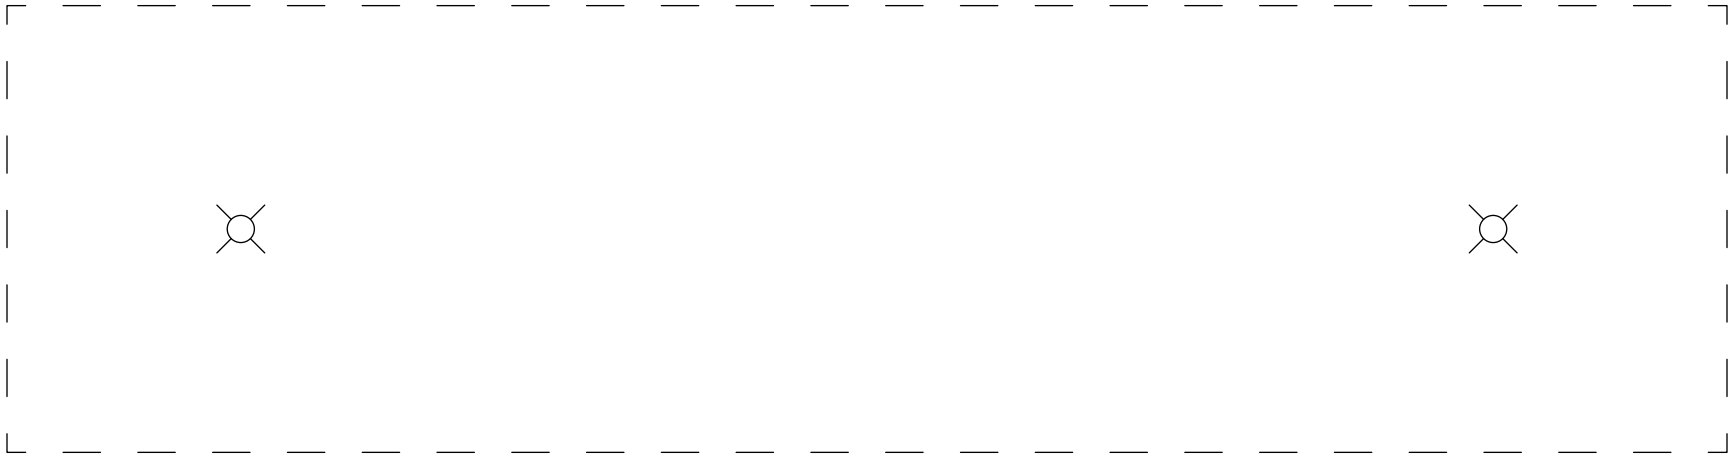


**5**

Mark the points where the screws to attach the anchor plate will go on the solid ceiling under the plasterboard using a laser.

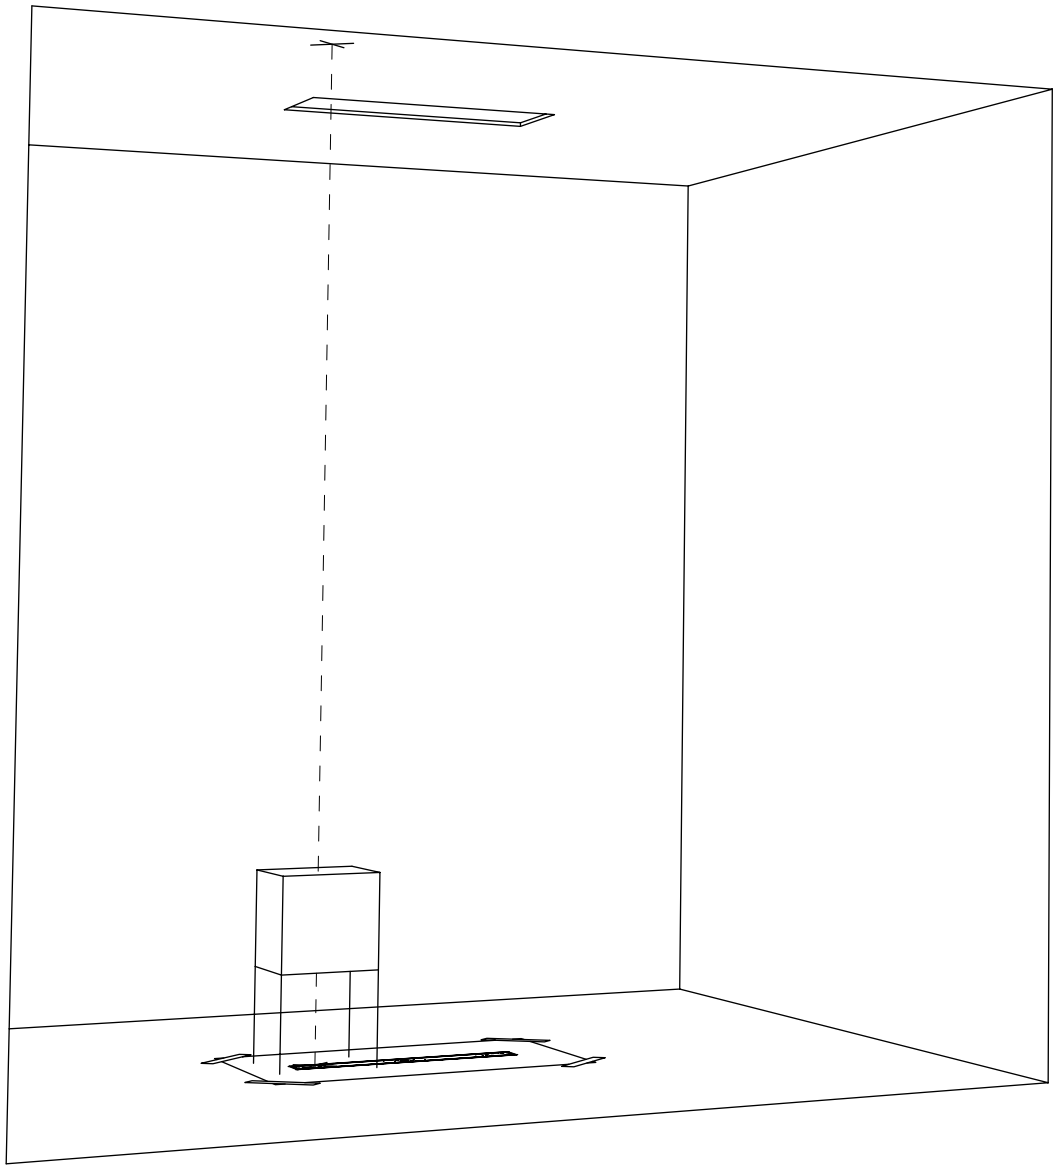


6

Fasten the mounting plate to the solid ceiling.

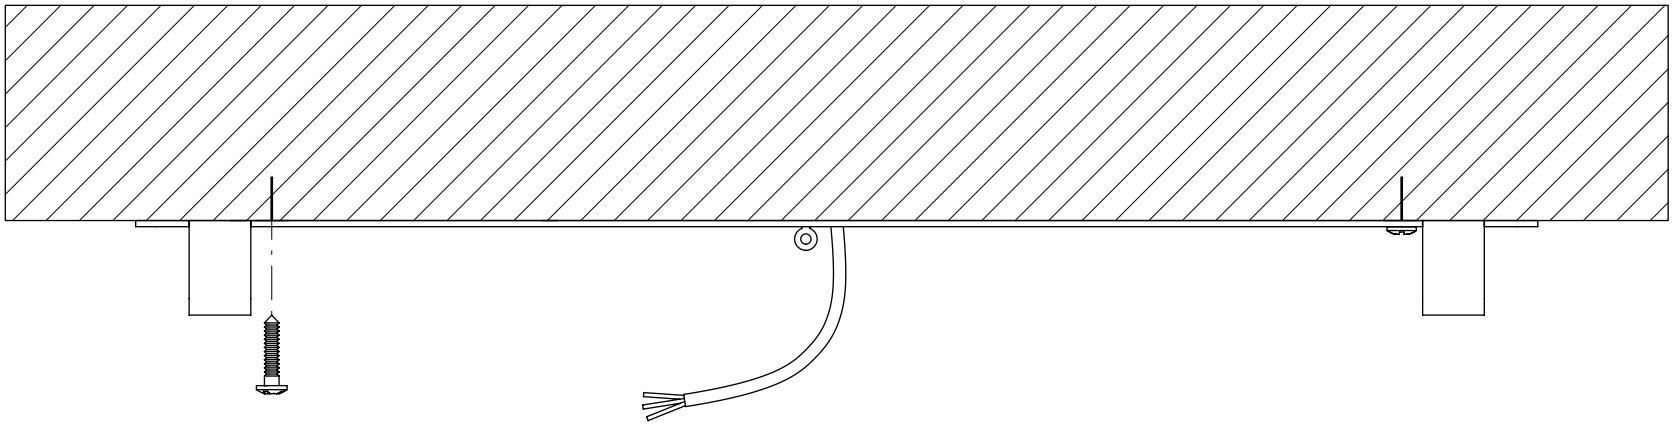


**7**

Install the grommets into the cut and drilled part of the false ceiling. Optionally, paint the grommet to match the ceiling color before installation.

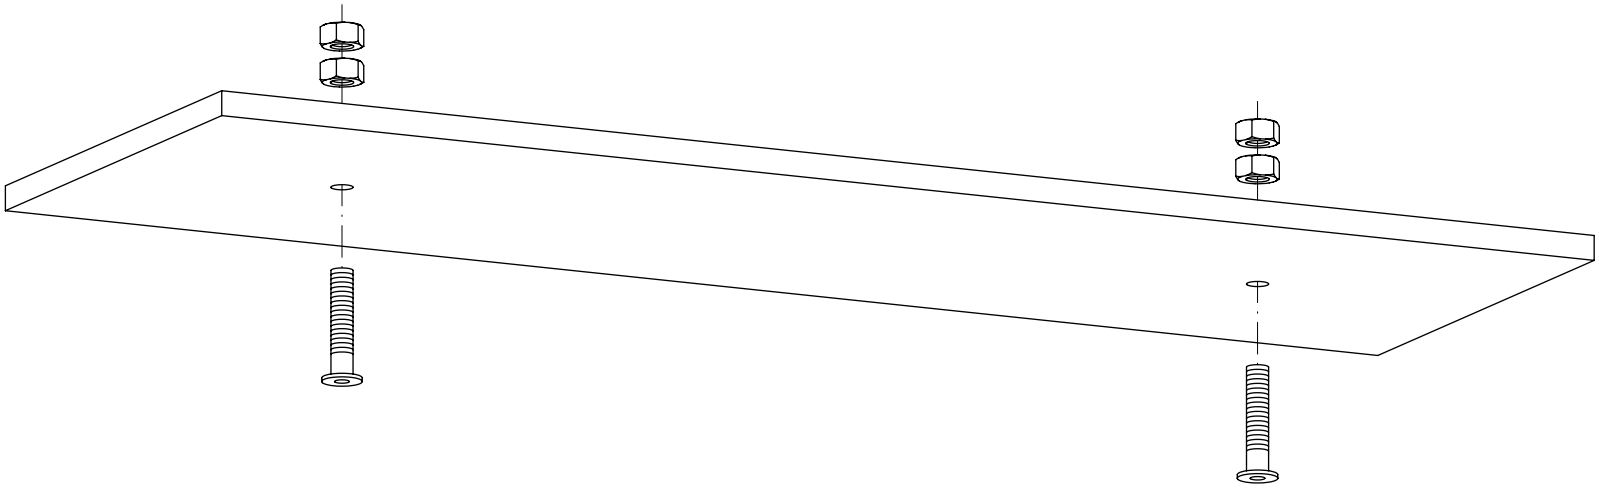


8

Shorten the cables from the light fixture to the desired length (add the distance between the solid and false ceiling to the visible cable length). Thread the ends of the cables through the grommets. Be careful not to make the cables dirty.

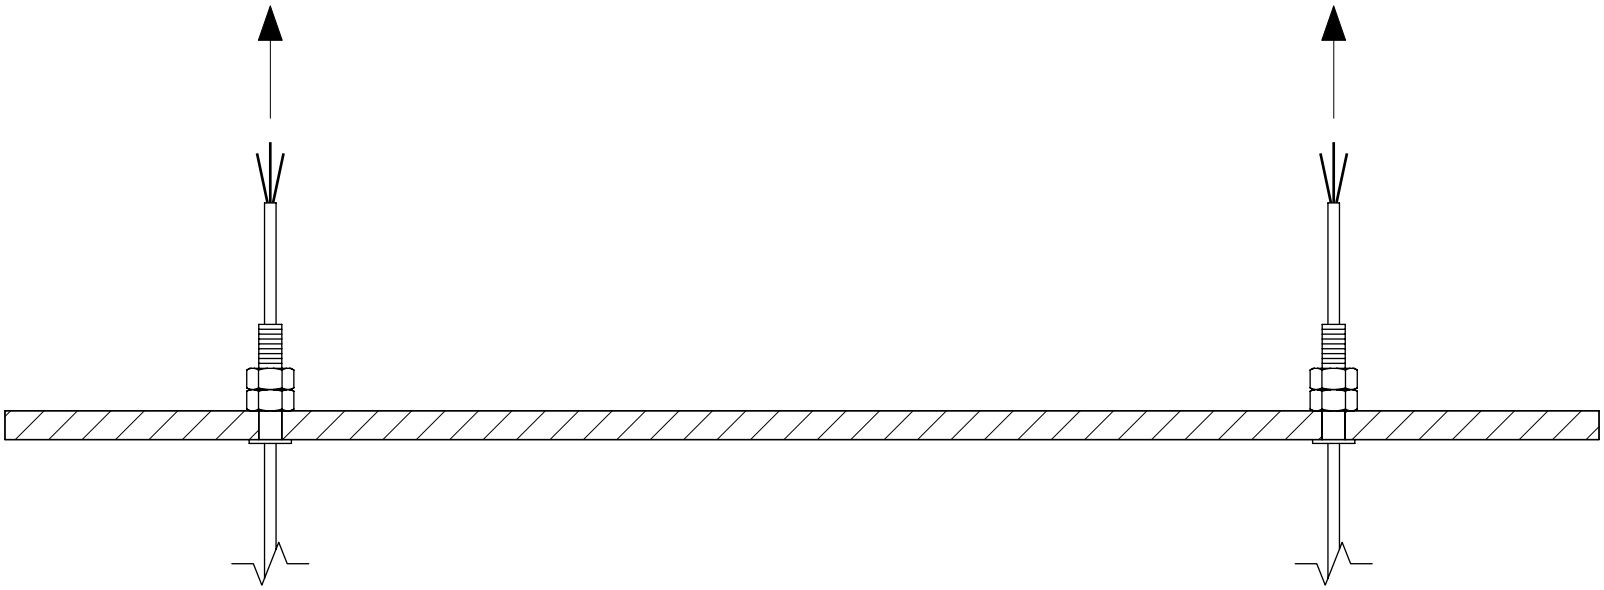

**9**

Insert the steel wires from both cables into the Reutlingers.
The steel wire end must protrude on the upper side of the reutlinger at least 25 mm.
Attach the pull-out safety device to the end of the steel wire.

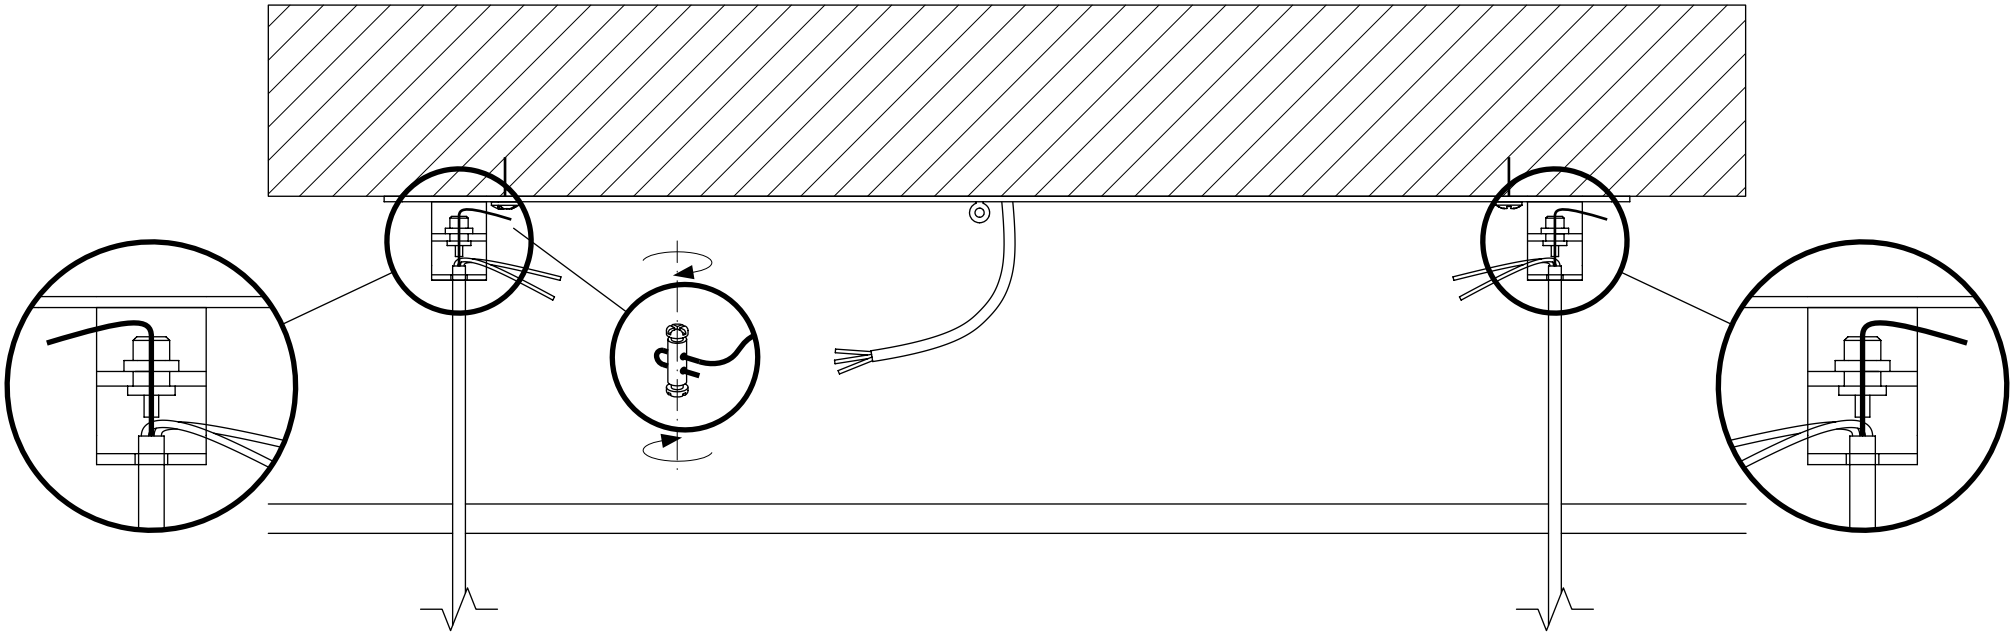

10

Install the wiring according to the diagram.
**MAXIMAL DISTANCE OF THE DRIVER FROM THE ANCHORING PLATE IS 30 M.**
Attention! Wrong connection can destroy both the driver and the light source.

## EU


**Input:**
Brown = L
Blue = N
Yellow green = PE

**Output:**
Red / Brown = +
Black / Blue = -

## USA

**Input:**
Black = L
White = N
Yellow green = PE


**Output:**
Red = +
Black = -

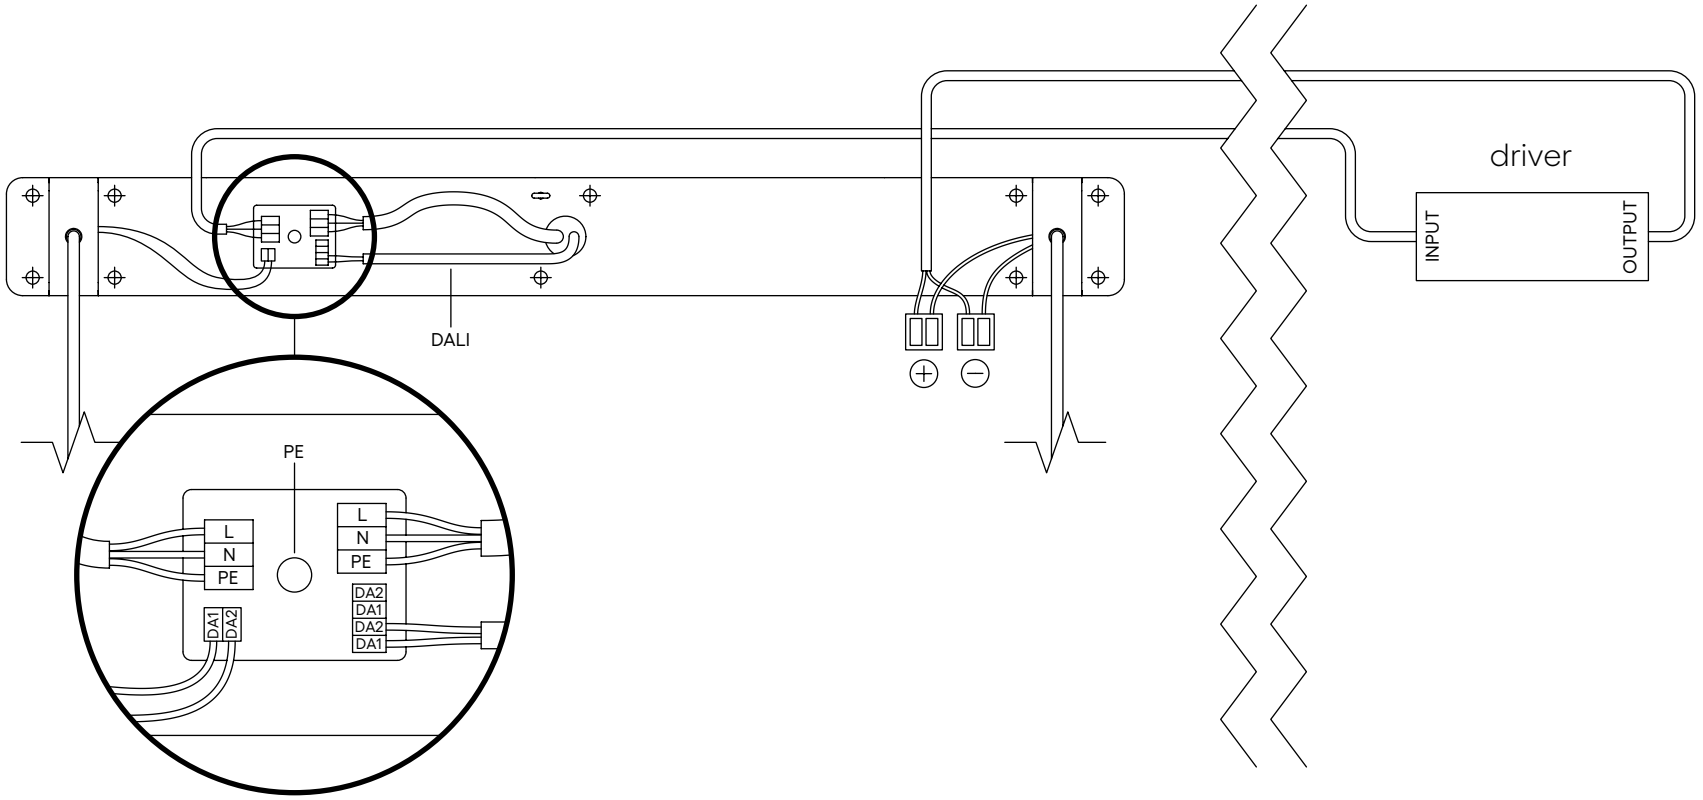


**11**

Place the wooden beams on the upper side of the false ceiling and screw them in place according to the diagram.
The beams serve as reinforcement for attaching the cut-out section of the ceiling.

front view

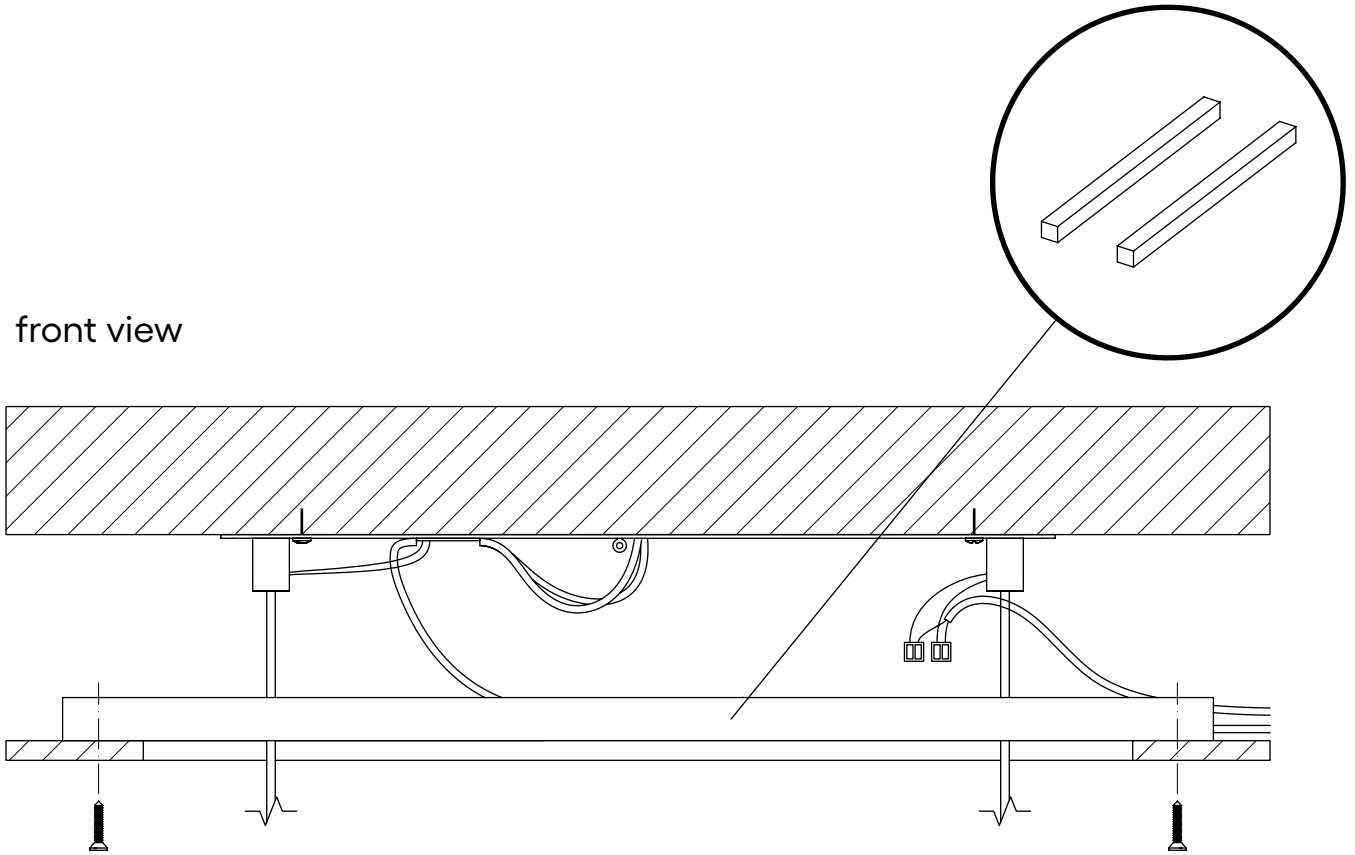


bottom view

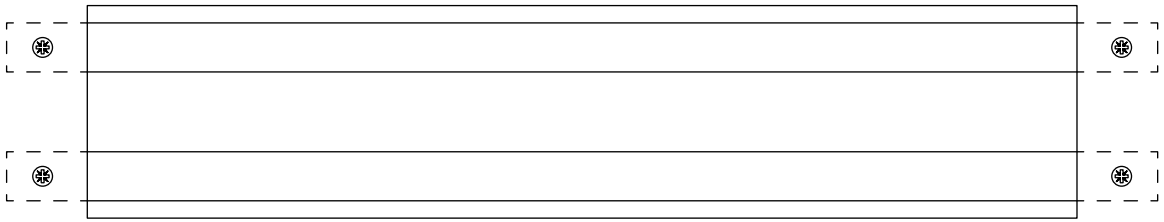


**12**

Screw the cut-out section of the ceiling to the wooden beams. Subsequently, patch and paint everything to match the ceiling color.

front view

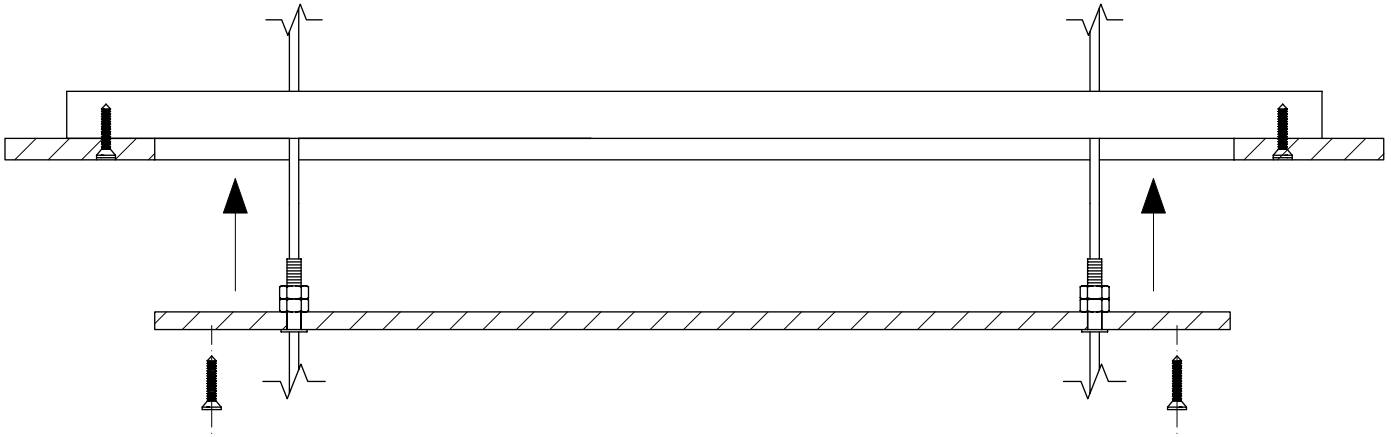



bottom view

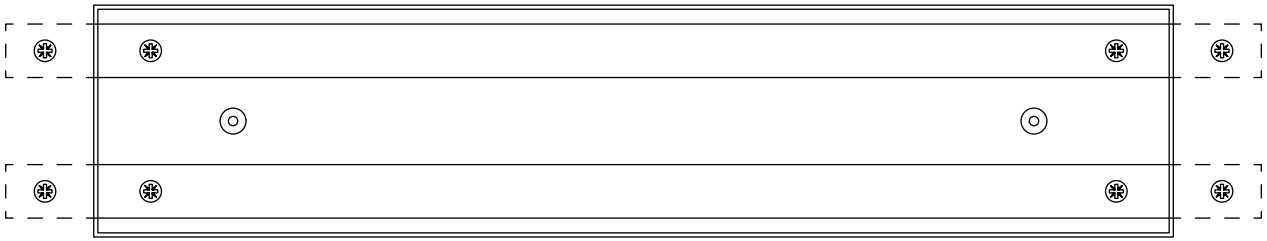

13

Congratulations! You have successfully completed the installation of the grommets into the false ceiling.





step beyond